

CAR MULTIMEDIA SYSTEM | USER'S MANUAL

SOL



KIA MOTORS
The Power to Surprise™

Thank you for purchasing this multimedia system.

This user's manual explains how to use the KIA Motor multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precaution for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.



All Map Database cannot be copied without permission.

Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without M&Soft, Inc's prior written consent.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation

of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

- Infinity is a trademark of Harman International Industries, Inc.
- At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS6 compatibility expected early 2013. Additional compatible devices expected late 2013.
- App Store is a service mark of Apple Inc. No charge for the UVO eServices app. App runs on your smartphone cellular data service. Normal data rates will apply.
- HD Radio™ and the HD Radio™ logo are proprietary trademarks of iBiquity Digital Corporation.

- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.
- Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
- 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
- The rear-camera display is not a substitute for proper and safe backing-up procedures. The rear-camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Read the following safety cautions for your safety.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- ※ The design and specification of this product may change without prior notification for product improvement.
- ※ For more information on open licenses and legal notices, refer to the website below.
http://www.mobiszone.co.kr/front/mall/jsp/manual/avn_download_center_manual.jsp

Notations used within this User's Manual

WARNING

- Failure to observe the instructions within this category could result in damage to the vehicle.
-

CAUTION

- Information on matters that could potentially lead to injury or vehicle damage/malfunction Information that could lead to higher user safety
-

Information

- Information and tips that provide additional user convenience in using the product
-

NOTICE

- Information on specific features that facilitate proper product use and functional understanding
 - Information on terminology used within this manual
-

Table of Contents

1. Basic

Warnings and Cautions	1-2
Key Product Features.....	1-4
Component Names and Functions....	1-5
Head Unit	1-5
Steering Wheel Remote Controller.....	1-7
Starting the System for the First Time ...	1-9
Turning the System On/Off	1-9
System Reset	1-9
Battery Warning Message	1-10
Home Screen	1-11
On-Screen Touch Controls	1-12

2. About Using AV

FM/AM Mode	2-2
Accessing FM/AM Mode	2-2
About HD Radio™ Technology ...	2-4
Basic Mode Screen (HD Radio™ reception ON)	2-5
SiriusXM™ Mode	2-5
SiriusXM™ Mode Hard Key Controls	2-5
SiriusXM™ Mode Display Controls ...	2-6
Selecting through Channel/Category List ...	2-8
Direct Tune	2-8
Viewing Menu	2-8
Media Mode	2-10
Starting Mode	2-10
About USB.....	2-11
Before Playing a USB MP3.....	2-11
USB Music	2-13
USB Image	2-16
About iPod	2-18
Caution	2-20
iPod	2-22
AUX	2-25

Bluetooth® Audio Mode	2-26
Bluetooth Audio	2-26
Bluetooth Connections Settings	2-27
My Music	2-28

3. Using Bluetooth

Before Using the Bluetooth®

Handsfree..... 3-2

What is Bluetooth® Wireless Technology? ... 3-2

Precautions for Safe Driving 3-2

CAUTIONS upon Connecting Bluetooth®

Phone 3-3

Bluetooth Connection..... 3-4

Pairing a New Device 3-4

Connecting Bluetooth Devices 3-4

Disconnecting Bluetooth Devices 3-5

Deleting Bluetooth Devices..... 3-5

Bluetooth Phone 3-6

Phone Status Icons 3-6

Dial 3-7

Accept/Reject Call 3-7

Using the Menu During a Phone Call... 3-8

Call History 3-9

Contacts 3-10

Favorites 3-11

4. About Using UVO eServices

Before Using UVO eServices..... 4-2

UVO eServices 4-2

Roadside Assist 4-2

eServices Guide 4-3

5. Navigation

Basic Features 5-2

Operating Navigation Screen 5-2

Changing Map View 5-3

Voice Guidance Volume On/Off 5-3

Zoom In /Zoom Out..... 5-3

Map Scale 5-4

Menu 5-4

Route Option 5-4

Detour 5-5

Navigation Volume 5-5

Nearby POIs 5-6

Search..... 5-14

Address 5-14

Route Setting 5-21

Route Guidance 5-24

Route..... 5-26

Canceling Route 5-26

Display Route Information 5-26

Route Overview 5-27

Route Preview 5-27

Editing Route 5-28

Route Options 5-29

Avoid Street 5-29

Navigation Settings..... 5-30

General 5-30

Display 5-30

Guidance 5-31

Route 5-31

Traffic 5-31

Before Thinking There is a Product Defect..... 5-32

6. Voice Recognition

What is Voice Recognition? 6-2

**Precautions Required for
Successful Voice Recognition... 6-2**

**Starting/Ending and Setting Voice
Recognition 6-3**

Starting Voice Recognition 6-3

Ending Voice Recognition 6-3

Extending the Standby Time 6-4

Skipping Prompt Messages 6-5

Adjusting Voice Recognition Volume ... 6-5

Voice Recognition Screen

Overview 6-6

Start Screen..... 6-6

Help Screen..... 6-6

Instructions for Using Voice Recognition 6-7

Voice Commands..... 6-8

Types of Commands 6-8

Phone Commands 6-8

Navigation Commands 6-9

Radio Commands 6-11

Media Commands 6-12

Other Commands List

(Commands used in List / Help) 6-14

“Find the Nearest <Category>” List ... 6-15

7. Info

Pandora Radio Mode 7-2

Pandora Radio Mode 7-2

Pandora Radio Mode Screen Controls 7-3

Quick Guide 7-6

Touch Control 7-6

Home 7-6

Bluetooth 7-7

Voice Recognition 7-7

SiriusXM™ Data 7-8

Accessing SiriusXM™ Data 7-8

SiriusXM™ Weather Announcement 7-8

SiriusXM™ Traffic Information 7-9

SiriusXM™ Fuel Price Information ... 7-10

SiriusXM™ Stock Information 7-11

SiriusXM™ Sports Information 7-12

SiriusXM™ Movie Information 7-14

8. Other Features

Climate Mode 8-2

Operating Climate Mode 8-2

Basic Mode Screen 8-2

About Rear Detection Camera 8-3

9. Setup

Setup	9-2
Sound Settings.....	9-3
Display Settings	9-3
Phone Settings.....	9-4
Phone Settings	9-4
Bluetooth Connection Settings	9-4
Auto Download	9-5
Auto Connection Priority	9-5
Phone Ringtone	9-6
Audio Streaming	9-6
System Bluetooth Information.....	9-7
Voice Recognition Settings	9-7
Clock Settings	9-8
Keyboard Settings	9-8
Screen Saver Settings.....	9-8
System Info	9-9
System Update	9-9

10. Appendix

Product Specification.....	10-2
Before Thinking the Product Has Malfunctioned	10-4
Troubleshooting	10-5
FAQ	10-7
About Pairing Mobile Phones	10-7
About Making/Answering Phone Calls ...	10-8
About <i>Bluetooth</i> ® Wireless Technology/Head Unit Use Environment	10-8



CAUTIONS upon Using SD Cards

• Ejecting and Inserting SD Cards

- Ejecting and inserting SD cards while the multimedia system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the multimedia system and the vehicle ignition.
- Eject/insert SD cards only to update the multimedia system with a new version.

※ When an SD Card with the new version is inserted, then system update will occur automatically

• Usage of SD Cards

- The SD Card is formatted to include only Map and new system update files.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth® Wireless Technology

The *Bluetooth®* Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth®* Wireless Technology SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth®* Wireless Technology enabled cell phone is required to use *Bluetooth®* Wireless Technology. *Bluetooth®* Wireless Technology phone compatibility can be checked by visiting www.kia.com/bluetooth.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



01

part. 1 Basic

Warnings and Cautions

Key Product Features

Component Names and Functions

Starting the System for the First Time

Safety Warnings

- Even when receiving route guidance from the Navigation system, please abide by actual traffic and road regulations. Following only the Navigation route guidance may lead to violations of actual traffic and road regulations and lead to traffic accidents.
- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not operate the Navigation system while driving, such as entering POIs or conducting route searches. Such acts could lead to accidents, fire, or electric shock. Park the vehicle before operating the device.
- Do not disassemble, assemble, or modify the Navigation system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.
- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen. (The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Safety Cautions

Pay attention to traffic conditions while driving.

- In some instances, the navigation may provide guidance through re-restricted areas.
- Operating the device while driving could lead to accidents due to a lack of attention to external surroundings. First park the vehicle before operating the device. In addition, the touch screen may not work for some functions when the vehicle is in motion. The touch screen feature will be supported once the vehicle has stopped.
- Adjust the volume to levels that allow the driver to hear sounds from outside of the vehicle. Driving in a state where external sounds cannot be heard may lead to accidents.
- Pay attention to the volume setting when turning the device on. A sudden output of extreme volume upon turning the device on could lead to hearing impairment. (Adjust the volume to a suitable level before turning off the device.)
- If you want to change the position of device installation, please inquire with your place of purchase or service maintenance center. Technical expertise is required to install or disassemble the device.
- Turn on the car ignition before using this device. Do not operate the Navigation system for long periods of time with the ignition turned off as such operations may lead to battery discharge.
- Upon using the Navigation system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 3 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product malfunctions, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Key Product Features

This device is an Audio Navigation system equipped with a multi-functional disc player that supports Radio (FM, AM), HD Radio™ technology, SiriusXM™, USB, iPod, Audio AUX, Bluetooth Audio and My Music features. The WIDE VGA LCD provides a high quality resolution while the powerful and rich sound system adds to the driving enjoyment.

Display	Wide TFT-LCD Display <ul style="list-style-type: none">• Provides high quality video through a Wide TFT-LCD Display using an LED Back Light.• Touch screen for maximum user convenience.
Radio	Digital Tuner Feature <ul style="list-style-type: none">• Digital Tuner using PPL method that supports memory of 12 broadcast stations for each AM and FM modes. Radio broadcast station name <ul style="list-style-type: none">• Displays broadcast station names for key locations. HD Radio™/Satellite Radio feature <ul style="list-style-type: none">• Supports HD Radio™ reception and Satellite Radio (SiriusXM™).

Multimedia Player	Support for various Media Formats <ul style="list-style-type: none">• Support for various media formats, including Radio, USB, iPod, AUX and Bluetooth® Audio Streaming modes My Music <ul style="list-style-type: none">• Supports copying of music stored within USB devices into My Music (internal memory) mode
Navigation	Voice Guidance <ul style="list-style-type: none">• Voice route guidance to safely and conveniently reach set destinations• Various map scales that enables drivers to accurately view map and surrounding areas Automatic Correction for Current Location <ul style="list-style-type: none">• Automatically corrects current position using map matching and GPS information.
Miscellaneous	Bluetooth® Wireless Technology <ul style="list-style-type: none">• Convenient use of Bluetooth® Handsfree by using buttons within the steering wheel remote controller Digital Screen Control Features <ul style="list-style-type: none">• Easy control of features through touch screen options Steering Wheel Remote Controller <ul style="list-style-type: none">• Control over audio features, voice recognition and Bluetooth® through the steering wheel remote controller for maximum convenience

Component Names and Functions

Head Unit



Name		Description
1	RADIO	Converts to FM/AM/SiriusXM™ mode <ul style="list-style-type: none">Each time the key is pressed, the mode is changed in order of FM → AM → SiriusXM™ → FM
2	MEDIA	Converts to MEDIA mode <ul style="list-style-type: none">If the media is not connected or is or CD player not available for Model, Media mode will not be activated.Press this key to move to the last mode that you accessed in Media. Press it once again to display the screen where you can select a Media mode.
3	UVO	Displays the UVO mode
4	SEEK TRACK	When key is pressed shortly. (under 0.8 seconds) <ul style="list-style-type: none">FM/AM mode : plays previous/next frequencySiriusXM™ mode : plays the previous/next channelMEDIA (USB/iPod/My Music) modes : changes the track, file or chapter (except USB Image and AUX) When key is pressed and held. (over 0.8 seconds) <ul style="list-style-type: none">FM/AM mode : continuously changes the frequency until the key is releasedSiriusXM™ mode : continuously changes the channel until the key is released and plays the current channelMEDIA (USB/iPod/My Music) modes : rewinds or fastforwards the track or file (except USB Image, Bluetooth Audio and AUX)
5	MAP VOICE	VOICE Displays the map for the current position
6	NAVI	Moves user to the menu screen where you can find your destination and set the route.

Head Unit





	Name	Description
7	PHONE	Takes user to home phone screen
8	INFO	Displays the information mode
9	SETUP	Displays the Setup mode
10	PWR/ VOL	<ul style="list-style-type: none"> When power is off, press to turn power on When power is on, press and hold (over 0.8 seconds) to turn power off When power is on, press shortly (under 0.8 seconds) to turn Audio off Turn left/right to control volume
11	TUNE	<ul style="list-style-type: none"> In FM/AM mode, changes the frequency In SiriusXM™ mode, changes the channel In USB, iPod, My Music modes, changes the track, file or chapter(except USB Image, Bluetooth Audio and AUX)
12	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted.)
13	SD MAP	SD Card insert slot

Steering Wheel Remote Controller





Name	Description
1 VOLUME	Controls the volume
2 MODE	<ul style="list-style-type: none"> Each time this key is pressed, mode is changed in order of FM → AM → SiriusXM™ → USB Music or iPod → AUX → Bluetooth Audio → My Music If the media is not connected, corresponding modes will be disabled Press and hold the key (over 0.8 seconds) to turn the Audio system on/off When power is off, press the key to turn power back on

Name	Description
3 	<p>When keys are pressed shortly. (under 0.8 seconds)</p> <ul style="list-style-type: none"> FM/AM mode : searches broadcast frequencies saved to Presets SiriusXM mode : searches broadcast channels saved to Presets Media(MP3/USB/iPod/My Music) mode : changes the track, file or chapter (except USB Image, Bluetooth Audio and AUX) <p>When keys are pressed and held. (over 0.8 seconds)</p> <ul style="list-style-type: none"> FM/AM Mode : Automatically searches broadcast frequencies SiriusXM™ mode : automatically searches broadcast channels Media mode : Quickly looks up songs (excluding USB images, AUX, and Bluetooth audio files)
4 	<p>When pressed shortly. (under 0.8 seconds)</p> <ul style="list-style-type: none"> Activates voice recognition <p>When pressed and held. (over 0.8 seconds)</p> <ul style="list-style-type: none"> Ends voice recognition

Steering Wheel Remote Controller

 


Name	Description
<div data-bbox="826 344 850 367">5</div> <div data-bbox="874 344 962 372">  </div>	<p>When pressed shortly. (under 1.2 seconds)</p> <ul style="list-style-type: none"> • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) <p>When pressed and held. (over 1.2 seconds)</p> <ul style="list-style-type: none"> • When pressed in the Bluetooth® Handsfree, redials the last call • When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected)
<div data-bbox="826 596 850 619">6</div> <div data-bbox="874 596 962 624">  </div>	<ul style="list-style-type: none"> • When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.

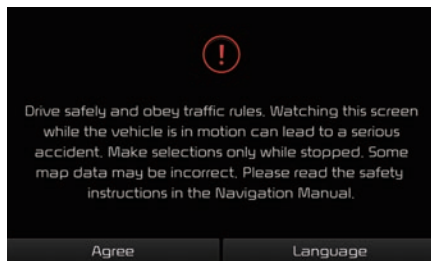

Pressing the power key on the head unit will display the user agreement screen. To change the system language between Korean and English, French, Spanish press the Change **Language** button.

NOTICE

- Cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power button on the head unit will turn off the system.

You can change Screen Saver Settings in Setup to display a clock or another chosen image on the Screen Saver.

Information

- If you turn off the system during a phone call using the hands-free feature, then the call will automatically switch to your mobile phone.

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset

 
The System Reset function restores the system when it is malfunctioning. Press and hold the **RESET** key for a second or longer. (It is recommended that you press the **RESET** key using a tool, such as a pin or a clip.)

NOTICE

- Resetting the system restores all existing settings and configurations (e.g. volume, display, etc.) back to their factory defaults. This is not a system defect. It occurs because the information stored in memory is reset back to factory settings as a normal process of resetting the system.

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.

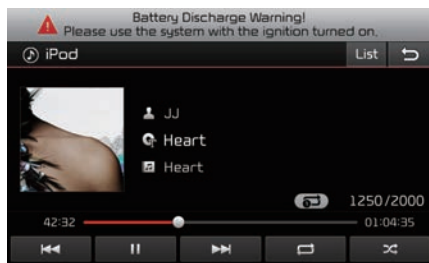


NOTICE

- If you use the system for a long time with the engine off, the battery may become completely empty.
-


Restrictions on Features for Safety Measures

 If you try to use such features as DMB and video modes that distract you from driving, the system turns the screen off or the function will be disabled and then the related warning message will appear. Even when the video is off, the audio player is not affected. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

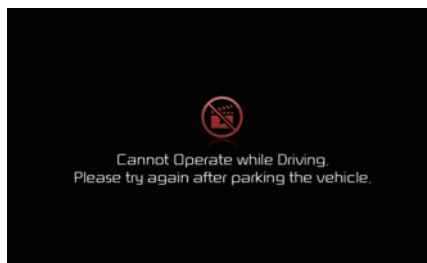

Home Screen

 Controls Menu Configuration for the Home Screen

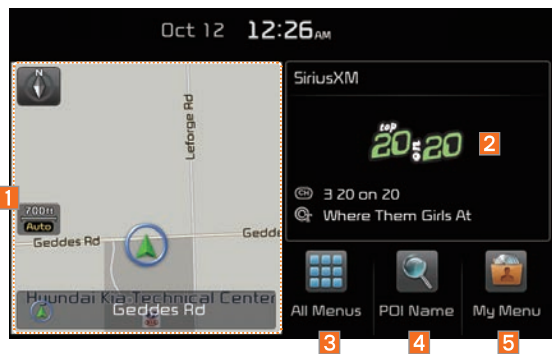

Features	Description
1 Navigation Widget	<ul style="list-style-type: none"> Provides a brief view of the navigation map and the route screen. Touch any area on the screen to move to the navigation screen.
2 AV Widget	<ul style="list-style-type: none"> Shows brief information on the radio media currently playing. Touch the area to move to the mode for what you are listening to.
3 All Menu	Shows all of the items in the system menu.
4 POI Name	Directly moves to the screen where you can search for your destination.
5 My Menu	<ul style="list-style-type: none"> You can add and save up to eight menu items. Add your favorite menu items to have quick and easy access to them.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.


	AV-Mute	Navigation-Mute	Making a call and Bluetooth connection			
ICON						
Description	Mute AV sound	Mute Navigation sound	Bluetooth phone remaining battery	HF connection	Making a call using BT phone	Bluetooth phone reception sensitivity
ICON						
Description				Connecting to music stream		
ICON						
Description				HF+ streaming connection	Mute Bluetooth phone microphone	
ICON						
Description				Downloading contacts/ recent calls		

Adding Your Favorite Menu Items to My Menu

From the Home screen, select **My Menu** ► and then **Edit** .

From the My Menu Settings screen, select menu items from the list on the right, then drag and drop them to a desired place on the left.

 On the other hand, if you drag items from the left and drop them on the right, they will be deleted from My Menu instead.

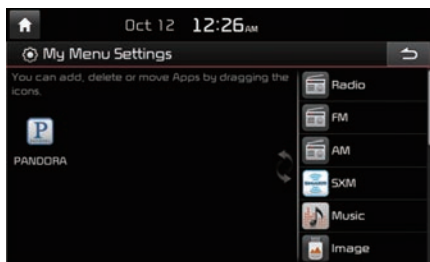

i Information

- Up to eight items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select

 
Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop


Select a menu or item you want, then drag and drop it to where you want to place it.

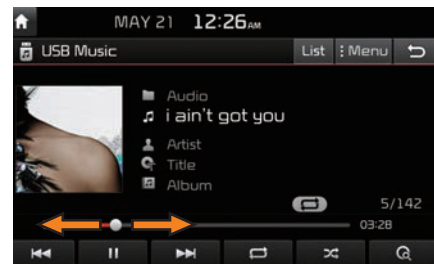

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.




 Drag the frequency bar to the left or right to move to the frequency that you want.

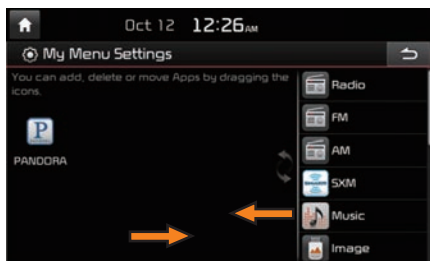

From the My Menu Settings screen, drag and drop icons to add, delete, or move to/from My Menu.

 
Flick (Quick Scrolling)

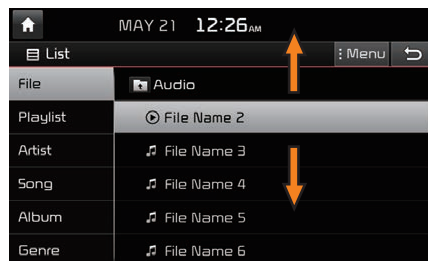

Quickly moves up and down in the list.

NOTICE

 - Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler

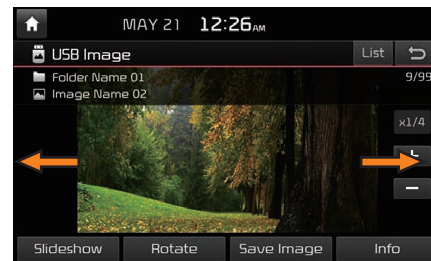




You can view the previous or next image by flicking left/right on an image on the USB Image screen.



Flick left/right on the frequency bar in the radio player to look up the previous/next frequency available.


Press and Hold

 Pressing the  and  buttons in the music or video player will fast forward/rewind the music or video.

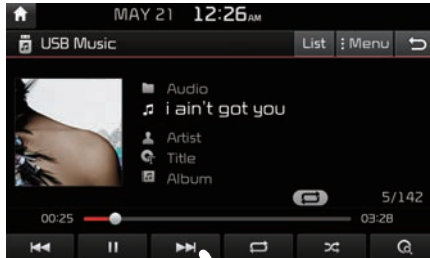

Zoom In/Out

 You can maximize the size of a photo on the USB Image screen by tapping it twice quickly. To minimize the size of the photo, quickly tap it twice again.

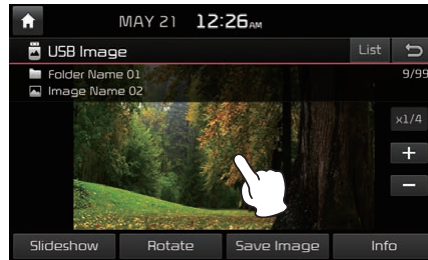

02

part.2 About Using AV

 
- FM/AM Mode
- About HD Radio™ Technology
- SiriusXM™ Mode
- Media Mode
- About USB
- Bluetooth® Audio Mode

About Using AV

FM/AM Mode

Accessing FM/AM Mode


You can access the radio player either by pressing the Radio hard key or by selecting the Radio menu option from All Menus on the Home screen.

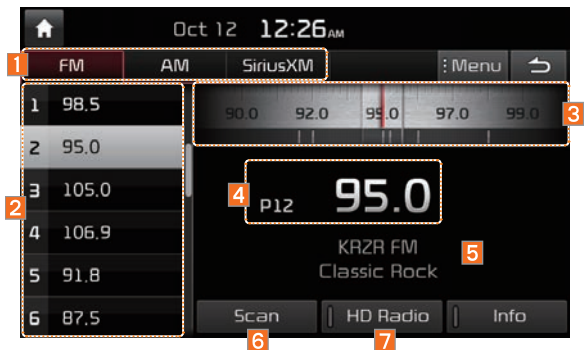

i Information

- If you press the Radio hard key when the power is off, then the power will turn on and a radio broadcast will be tuned up.
- If you are in the FM/AM mode, select the FM/AM radio widget from the Home screen to access the radio player.

Features	Description
1 Mode Display	<ul style="list-style-type: none">• Displays currently operating mode• If select wanted mode tap, it will change to selected mode in Radio.
2 Preset	<ul style="list-style-type: none">• Shows saved presets for user selection• After selecting frequency → press and hold (over 0.8 seconds) the preset button. A 'beep' will sound and the frequency is saved to the selected preset button. <p>i A total of 24 frequencies with 12 preset frequencies each for FM/AM modes can be saved.</p>
3 Frequency Bar	<ul style="list-style-type: none">• Flick the frequency bar left/right to search for available radio channels to the left or right of the current channel.• Dragging: Drag the frequency bar to the left/right to find the radio channel that you want.
4 Frequency	Displays the current frequency
5 Broadcast station	Displays the current broadcast station name.
6 Scan	Plays frequencies with superior reception for 5 seconds each
7 HD Radio™ on/off	used to set whether to turn HD Radio™ reception On/Off.

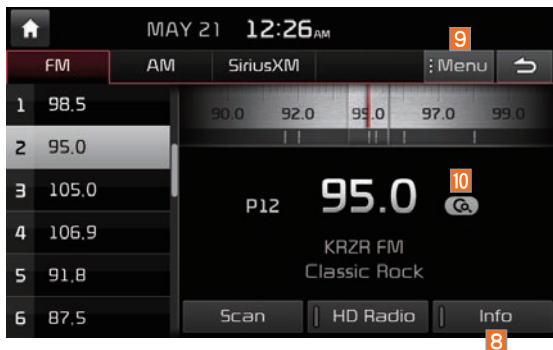 

Features	Description
8 Info	<p>Turns the Radio Text information on and off</p> <ul style="list-style-type: none"> • If the ON Text On button is displayed (Text off state), information will not be displayed even if there is information being transmitted from the broadcast station. • If the Off Text Off button is displayed (Text on state), then broadcast information will be displayed. Information may not be displayed if there is no information being transmitted from the broadcast station.

Features	Description
9 Menu	<ul style="list-style-type: none"> • Autostore Saves frequencies with superior reception to Preset buttons i While Auto Store is operating, pressing the Auto Store button again will cancel the function and play the previous frequency. • Preset Scan Plays preset frequencies for 5 or 10 seconds each • HD on : 10 seconds • HD off : 5 seconds
10 Scan/ Auto Scan/ Preset Scan	Displays an activated mode from the Scan/Auto Scan/Preset Scan modes.
11 SEEK/TRACK	<ul style="list-style-type: none"> • Pressing this button briefly (less than 0.8 seconds) : Seeks the previous/next frequency. • Pressing and holding this button (longer than 0.8 seconds) : Moves quickly through all of the frequencies. From the moment that you release the button, the system will seek the next available frequency.
12 TUNE	<p>Turn the TUNE knob to manually seek available frequencies.</p> <ul style="list-style-type: none"> • FM : Increment/decrement by 200 kHz • AM : Increment/decrement by 10 kHz

About HD Radio™ Technology



PSD

Program Service Data :

Contributes to the superior user experience of HD

Radio™ Technology. Presents song name, artist, station IDs, HD2/HD3 Channel Guide, and other relevant data streams.

HD2/HD3

Adjacent traditional main stations are extra local FM channels. These HD2/HD3 Channels provide new, original music as well as deep cuts into traditional genre.

Digital Sound

Digital, CD-quality sound. HD Radio™ Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

i Information

- The HD Radio™ screen is displayed only when a HD Radio™ broadcast is being received

Basic Mode Screen
(HD Radio™ reception ON)



Name	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the currently available channels i As HD Radio™ reception is included within Radio mode, the methods of moving between channels, saving presets, searching, or methods of searching frequencies are identical. However, while the HD Radio™ related icon display will become active when within regions where an HD Radio™ signal can be received.

Name	Description
2 HD Channel Number	HD Channel number saved in preset
3 Broadcast Info	Displays detailed information about the current broadcast
4 HD Radio™ on/off	used to set whether to turn HD Radio™ reception On/Off.

SiriusXM™ Mode

SiriusXM™ Mode
Hard Key Controls

You can access the radio player either by pressing the Radio hard key or by selecting the Radio menu option from All Menus on the Home screen. Select the SiriusXM™ tab from the radio player.

i Information

- If you press the Radio hard key when the power is off, then the power will turn on and a radio broadcast will be tuned up.
- If you are in the SiriusXM™ mode, select the SiriusXM™ radio widget from the Home screen to access the radio player.
- When the power is off, pressing the Radio key will turn the power on and play a SiriusXM™ Radio broadcast.

SiriusXM™ Mode Display Controls





Features	Description
1 Mode Display	Displays currently operating mode. If select wanted mode tap, it will change to selected mode in Radio.
2 Preset	Shows saved presets for user selection After selecting frequency → press and hold (over 0.8 seconds) the preset button. A 'beep' will sound and the frequency is saved to the selected preset button. i A total of 18 frequencies for SiriusXM™ modes can be saved.
3 Channel Logo	Displays the current channel logo
4 Channel Info	Displays the current channel number and name
5 Contents Info	Displays the artist, title and other information about the current playing song
6 Category Info	Displays the current playing category
7 Scan	Plays all receivable channels for 10 seconds each
8 Direct Tune	Used to search for channels by entering channel numbers
9 Category	If you press Category, when search channels through SEEK, Tune and Scan, search it in the current category.
10 Category Selection Buttons	Used to select the previous/next category



Features	Description
11 Play Live	It will change to listening live broadcast mode.
12 Skip Backward	Repeats the previously broadcasted program. <ul style="list-style-type: none"> • Holding for less than 2 seconds: Moves to the previous segment. • Holding for less than 0.8 seconds : Moves to the previous segment • Holding for longer than 0.8 seconds: Moves to the previous 5 seconds
13 Play Pause	Pauses/plays the currently broadcasting program.
14 Skip Forward	Moves to the next segment.
15 List	Displays SiriusXM™ Radio Categories/Channel Lists
16 Menu	What's on My Preset? The program schedule saved in my preset. (For more details, see Section 2.5. Viewing Menu.) <ul style="list-style-type: none"> • Featured Favorite Theme channels recommended by SiriusXM™ . (For more details, see Section 2.5. Viewing Menu.) <ul style="list-style-type: none"> • Preset Scan Plays preset frequencies for 5 seconds each.
17 SEEK/TRACK	When key is pressed shortly.(under 0.8 seconds) Plays the previous/next channel When key is pressed and held.(over 0.8 seconds) Continuously changes the channel until the key is released and plays the current channel
18 TUNE	Changes the channel

Selecting through Channel/Category List

  
Press the **List** button ► Select the desired category and channel.

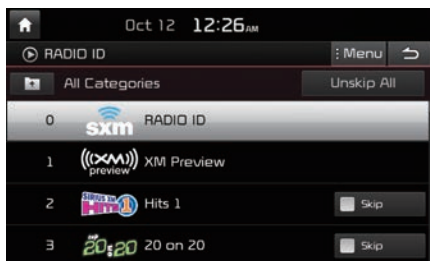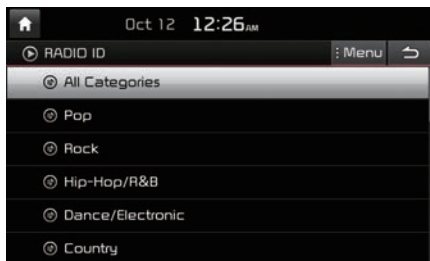

Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing.

If you select the **Skip** button, you can scan channels using the **SEEK** button or the **TUNE** knob by skipping the channels that you chose to skip.

 Direct Tune

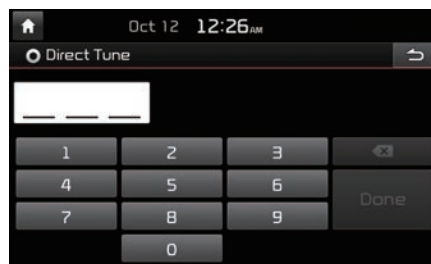


Enter the number of the channel you want to receive.

 Viewing Menu


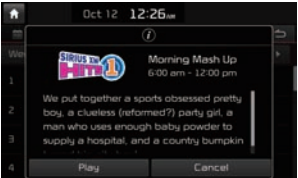 
Using the **Menu** button on the right, you can view the program schedule and information about the Featured Favorites provided by SiriusXM™.




What's on My Preset? (Program Schedule)

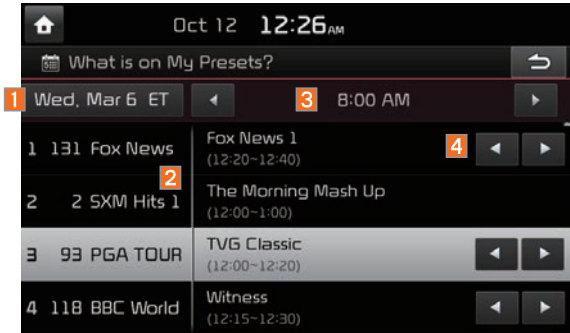

Menu → What's on My Preset? You can select Menu to see program information and the schedules of broadcast channels listed in the Preset.

Name		Description
1	Change Broadcast Date	By selecting this option, you can select a broadcasting date and time zone. Broadcast information will be provided for one week from the current date. 
2	Preset	Shows saved presets for user selection i A total of 18 frequencies for SiriusXM™ modes can be displayed
3	Broadcasting Time	You can select the time that you want.
4	Program Information	Shows you the program titles to be broadcasted at the time that you have chosen. Select a program to see more details.  i If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button.

 Featured Favorites

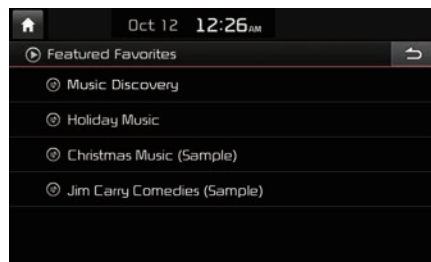

Featured Favorites feature allows SiriusXM™ to broadcast additional pre-sets

 
- Example 1 : "Martha's Favorites" may represent Martha Stuart's favorites pre-sets on her radio
- Example 2 : During holidays, "Holiday Music" may represent all the SiriusXM™ channels that are playing the holiday music for easy access by users

Multiple sets Featured Favorites data can be broadcast by SiriusXM™ and can change from time to time


Media Mode

Starting Mode

1. From All Menus, select an icon you want from "Music, Image, AUX" to enter the last mode you used.

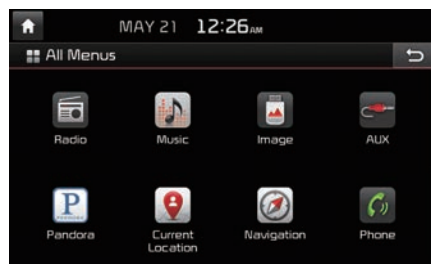

 2. You can enter the Media mode that you recently used by pressing the Media hard key while in another mode.
3. To go to a different mode after you enter Media mode, press Media and choose the one you want from.

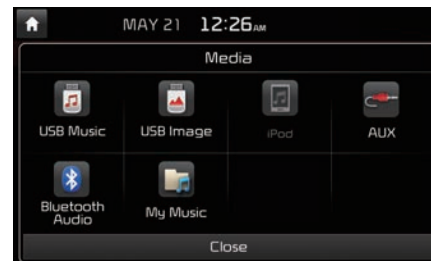

About USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music/image files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps ~ 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- This device recognizes USB devices formatted in FAT 12/16/32 file formats. This device does not recognize files in NTFS file format.
- Some USB devices may not be supported due to compatibility issues.

- Take caution so that the USB connector does not come in contact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in required time are not indications of malfunction.
- The use of USB devices for purposes other than playing music and image files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.



Plug Type Connector


- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- Upon playing iPods, please use a dedicated iPod car cable.
- Normal operations cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

i Information

 
- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.



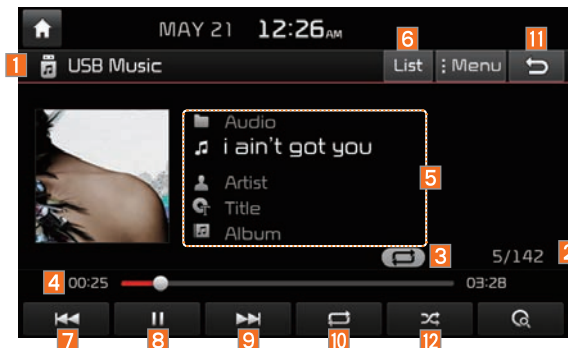




USB Music

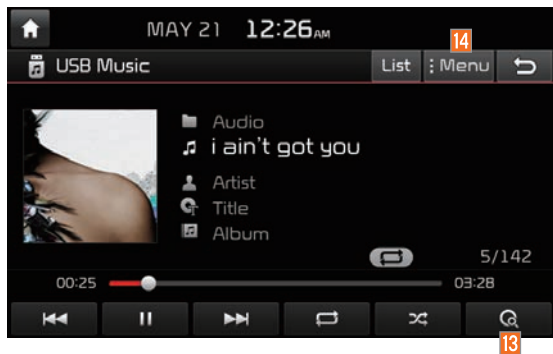 


Features	Description
1 Mode	Displays currently operating mode
2 File Index	Shows the current file/total files within the USB
3 Repeat/ Shuffle/ Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the information of the current track <ul style="list-style-type: none"> When a track in the file tab on the list screen is selected : Displays folder, file, title, artist, album info When a track in the other tabs on the list screen is selected : Displays artist, title, album info
6 List	Moves to the list screen

Features	Description
7 Previous File	If press button short (less than 0.8 seconds) : Moves to the previous file or play the current file from the beginning (Depends on the play time) <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file If play time is over than 3 seconds, play the current file from the beginning If press button long (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	<ul style="list-style-type: none"> If press button short (less than 0.8 seconds) : Moves to the next file If press button long (over than 0.8 seconds) : It fast-forwards the track
10 Repeat	Repeats the current file <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Press the REPEAT button to switch between repeating one song (REPEAT button), repeating folder (REPEAT button), and turning repeat off (REPEAT button) If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the REPEAT button to switch between repeating one song (REPEAT button) and turning repeat off (REPEAT button)
11 Back Button	Converts to basic mode screen
12 Shuffle	Plays files in random order <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Press the SHUFFLE button to switch between Shuffle Folder (SHUFFLE button), Shuffle All (SHUFFLE button), and turning shuffle off (SHUFFLE button) If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the SHUFFLE button to switch between Shuffle Category (SHUFFLE button) and turning shuffle off (SHUFFLE button)




Features	Description
13 Scan	<p>Scans the beginning parts of USB files (approx. 10seconds per file)</p> <ul style="list-style-type: none"> • If select the song in the file tab on the list screen : Press the SCAN button to switch between Scan Folder () , Scan All () , and turning scan off () • If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the SCAN button to switch between Scan category () and turning scan off ()
14 Menu	<ul style="list-style-type: none"> • Add to Playlist: Add the current track to the Playlist. Playlist is placed on the left tab in the list • Save to My Music: You can save the current track to My Music. You can play saved track from My Music without USB. Access to My Music in the Media mode.
15 SEEK/TRACK	<p>If press button short (less than 0.8 seconds) moves to previous/next file or play the current track from the beginning</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, play the current file from the beginning <p>If press button long (over than 0.8 seconds) it will rewind/fast-forward the track</p>
16 TUNE	<p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track.</p>

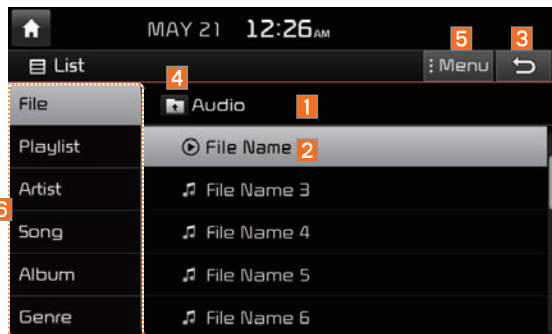 

Features	Description
5 Menu	<ul style="list-style-type: none"> • Add to Playlist : Adds the current track to the Playlist: Playlist is placed on the left tab in the list (Maximum 100 files) Select a desired track and press “Add to Playlist” to add the track in the playlist. • Delete from Playlist : Select a track you want to delete from the playlist and press “Delete from Playlist” to delete the track in the playlist • Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
6 Search Menu	<p>Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, and Genre.</p> <p>i If access the search menu while playing a track, it moves to the previous search mode.</p>
7 SEEK/TRACK	<p>If press short (less than 0.8 seconds): Plays previous/next track</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, play the current file from the beginning <p>If press long (over than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. It will play the track normally if button released.</p>
8 TUNE	<p>Turn the TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track.</p>

Features	Description
1 Folder/Category Name	Displays folder/category name in the list
2 Current Song	Displays currently playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder

 USB Image

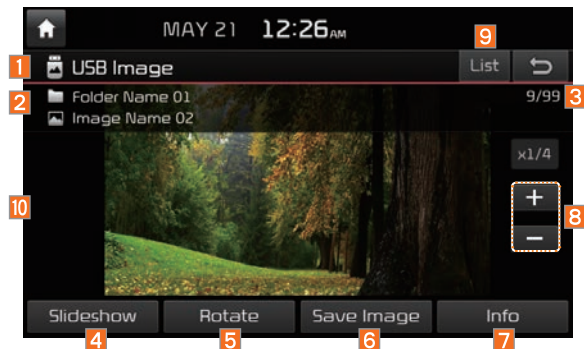

Features	Description
1 Mode	Displays currently operating mode
2 Folder Name	Displays folder name where image is located
3 File Index	Shows the current file/total files within the USB
4 Slideshow	images as slideshow in 5, 10, 20, 30 second intervals
5 Rotate	Rotate image in clockwise direction
6 Save Image	image as frame screen displayed when the system power is turned off
7 Info	Shows the file name, resolution and file type of current image
8 Adjust Image Size	Enlarge/reduce (zoom-in/zoom-out) image size
9 List	Moves to the list screen
10 Previous/Next Image, Enlarge/Reduce Image	<ul style="list-style-type: none"> • Swipe image left or right to see previous/next image • Maximum Image : Touch the screen twice quickly • Minimum Image : Touch the maximum screen twice quickly



Features	Description
1 Current File	Displays currently playing file name
2 Back Button	Converts to basic mode screen
3 Menu	Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
4 SEEK/TRACK	Controls background mode <ul style="list-style-type: none"> Radio mode: Changes Frequency and Channel Media mode: Changes Track (excluding AUX)
5 TUNE	Controls background mode <ul style="list-style-type: none"> Radio mode : Changes Frequency and Channel Media mode : Changes track (excluding AUX). If a desired track is displayed, press the knob to move to the track.

About iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
 - iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Navigation system.
 - For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
 - Search/play orders shown within the iPod device may differ with the orders shown within the Navigation system.
 - If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
 - If repeatedly connect and disconnect iPod/iPhone to the Navigation System with USB cable in short time, it may cause malfunction.
 - The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
 - For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to BT. (Bluetooth® Module)
 - To prevent this symptom, Bluetooth Audio function in the Navigation system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
 - To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
 - In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)
- ※ During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/ iPhone product.) will charge the iPod through the head unit.
- ※ **The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)**

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1~2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano /Classic, the KIA Motor logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications spe-

cifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the AVN iPod mode.

- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in AVN iPod mode.

Caution

- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Navigation system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.

- If you control pause, repeat, shuffle, or seek songs when the play time is when the play time is less than 3s before finished playing, it may occur difference of playing song between the Navigation system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.

- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or a product defect.



Type	1G	2G	3G	4G	5G	6G	6.5G	7G
iPod Mini	Not Supported							
iPod shuffle	Not Supported							
iPod Nano	○	○	○	○	○	○	Not released	○
iPod Touch	○ (iOS 1.1 not supported)	○	○	○	○	Not released		
iPad	○ (Unable to charge, Not verified, Normal working not guaranteed)							
iPad Mini	○ (Unable to charge, Not verified, Normal working not guaranteed)							
iPod Classic	Not Supported				○ (iPod with Video)	○ (iPod Cassic)	○ (iPod Cassic)	Not released

Type	3G	3GS	4G	4GS	5G
iPhone	Not verified, Normal working not guaranteed	○	○	○	○


Caution

  - If the iPhone/iPod Touch supports Bluetooth, it is unable to use Bluetooth Audio if the Apple device that is connected to the Navigation system through both USB connection and Bluetooth. Disconnect the USB connection then use Bluetooth Audio
- If iPod/iPhone connected to the Navigation system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Navigation system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature. Especially, if you use AUX cable like pictures, this problem may occur.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Navigation system via USB. Or change settings to "Dock" in iPod/iPhone.



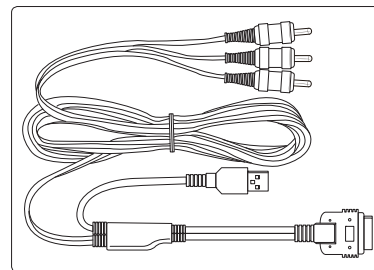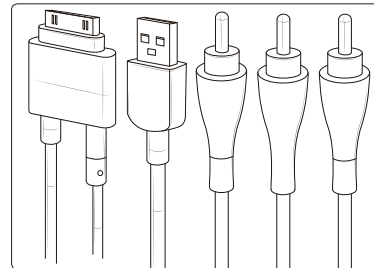

- If connect to the Navigation system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Navigation system when downloading finished or the file deleted.
- If connect to the Navigation system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)
- In the case of iPhone and iPod Touch products, normal operation is guaranteed for versions earlier than iOS 6.1.4. However, in iOS 7 version, normal operation is not verified. When iOS 7 is officially released in the future, versions later than iOS 6.1.4 will be supported with software updates.

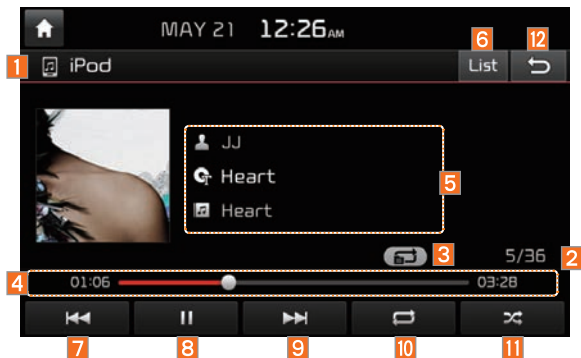 

iPod




Features	Description
1 Mode	Displays currently operating mode
2 Song Index	Shows the current song/total songs
3 Repeat/Shuffle	From Repeat/Shuffle, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the artist/song title/album info
6 List	Moves to the list screen

Features	Description
7 Previous File	<p>If press button short (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time)</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous file • If play time is over than 3 seconds, play the current file from the beginning <p>If press button long (over than 0.8 seconds) it rewinds the track.</p>
8 Play/Pause	Plays/pauses the current file
9 Next File	<ul style="list-style-type: none"> • If press button short(less than 0.8 seconds), Moves to the next file • If press button long(over than 0.8 seconds), it does fast-forward the track.
10 Repeat	<p>Repeats the current file</p> <p>Press the REPEAT button to switch between repeating 1 track , and turning repeat off </p>
11 Shuffle	<p>Plays files in random order</p> <p>When pressing shuffle button, it changes to shuffle category  → deactivate shuffle then repeat </p> <ul style="list-style-type: none"> • Shuffle Category: Shuffle song in the current category
12 Back Button	Move to home/previous mode screen



Features	Description
13 SEEK/TRACK	<p>If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning <p>If press button long (over than 0.8 seconds) it will rewind/fast-forward the track</p>
14 TUNE	<p>Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track.</p> <p>i If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.</p>

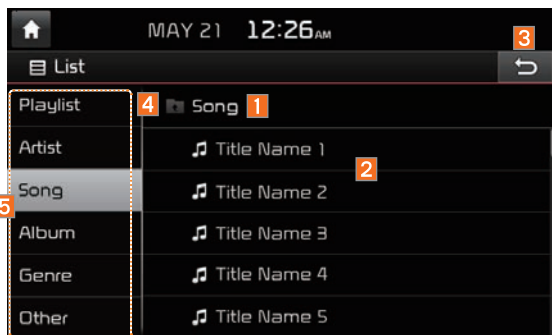 


Features	Description
1 Category Name	Displays the category name
2 Category List	Displays the contents of selected category i If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder
5 Search Menu	Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, and Genre. i If access the search menu while playing a track, it moves to the previous search mode.
6 SEEK/TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track.
7 Tune	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the TUNE search will be terminated.

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

 - AUX mode can be used only when an external audio player (camcorder, car VCR, etc.) has been connected.
- The AUX volume can also be controlled separately through the connected device.

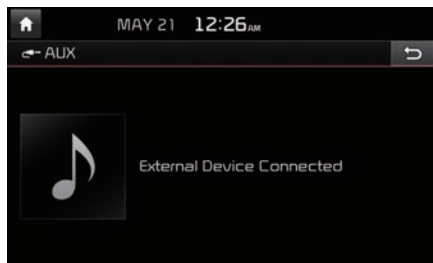

NOTICE


- If only cable connected to the AUX without an external device, the mode changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
 - When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.
-



Bluetooth® Audio Mode

Bluetooth Audio



Features	Description
1 Mode	Displays currently operating mode
2 Phone Name	Displays name of connected phone
3 Artist Info	Name of current artist
4 Title	Name of current song
5 Previous File	<ul style="list-style-type: none">• If play time is less than 3 seconds, moves to the previous file• If play time is over than 3 seconds, plays the current file from the beginning <i>i</i> This function may differ depending on the model of mobile phone
6 Play/Pause	Plays/Pauses Bluetooth Audio
7 Next File	Moves to the next file
8 Connections	Moves to the Bluetooth Settings screen. You can pair a new device or change/delete paired device(s)
9 SEEK/TRACK	Plays the previous/next file
10 TUNE	 TUNE is not supported.

 
i Information

- Artist info and Title may not be supported by mobile phone

Bluetooth Connections Settings

In Bluetooth Audio play screen,

Connections

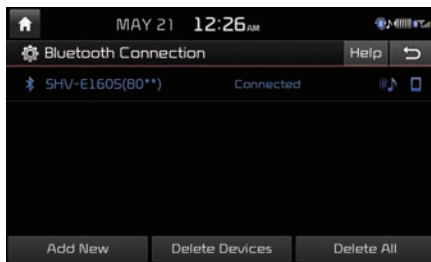


Refer to Setting → Phone → Bluetooth Connection Settings for pairing, connection and disconnection of a Bluetooth device

i Information

 
- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not supported for some mobile phones.
 - Please check the Bluetooth compatibility in below website:
 - KIA Motors Corporation <http://www.kia.com/us/bluetooth>
-



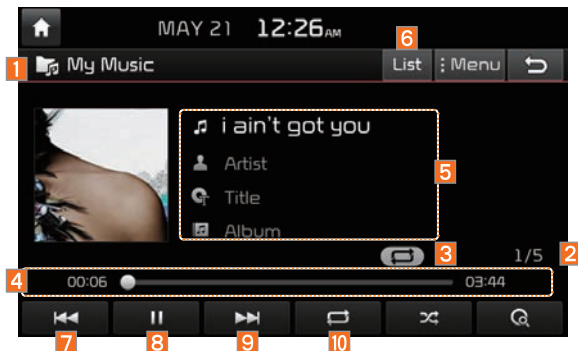

My Music





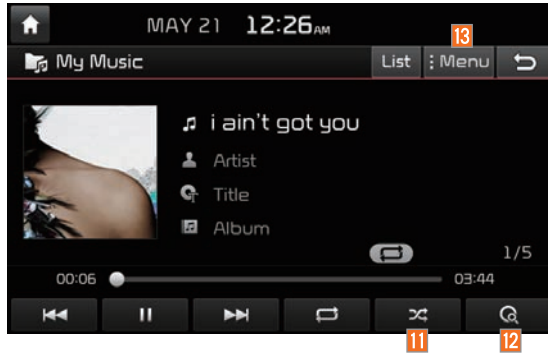 






Features	Description
1 Mode	Displays currently operating mode
2 File Index	Shows the current file/total files
3 Repeat/Shuffle/Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays track/artist/title/album info <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Displays File, artist, title, album info If select the song in the other tabs on the list screen : Displays artist, title, album info
6 List	Moves to the list screen

  Features	Description
7 Previous File	<p>If press button short (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time)</p> <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file If play time is over than 3 seconds, play the current file from the beginning <p>If press button long (over than 0.8 seconds) it rewinds the track</p>
8 Play/Pause	Plays/pauses the current file
9 Next File	<ul style="list-style-type: none"> If press button short (less than 0.8 seconds): Moves to the next file If press button long (over than 0.8 seconds) it will fast-forward the file
10 Repeat	<p>Repeats the current file</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Press the REPEAT button to switch between repeating one song (🔁) and turning repeat off (🔴). If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the REPEAT button to switch between repeating category (🔁) and repeating one song (🔁) and repeating category (🔁)



Features	Description
11 Shuffle	<p>Plays files in random order</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Press the SHUFFLE button to switch between shuffle  and turning shuffle off  If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the SHUFFLE button to switch between shuffle  and turning shuffle off 

Features	Description
12 Scan	<p>Scans the beginning parts of USB files (approx. 10seconds per file)</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen : Press the SCAN button to switch between scan  and turning scan off  If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the SCAN button to switch between scan  and turning scan off 
13 Menu	<ul style="list-style-type: none"> Add to Playlist: Adds the current song to the Playlist Playlist is placed on the left tab in the list Delete Current File: Deletes the current track from My Music.
14 SEEK/ TRACK	<p>If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, plays the current file from the beginning <p>If press button long (over than 0.8 seconds) it will rewind/fast-forward the track</p>
15 TUNE	<p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track.</p> <p> If the  TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.</p>

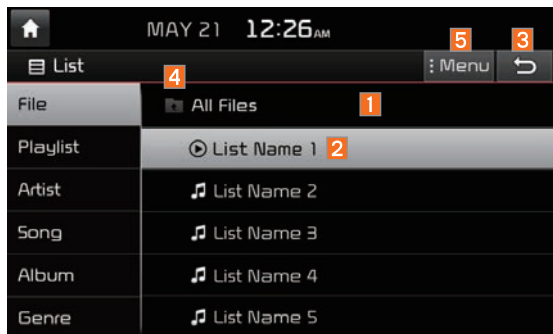 

Features	Description
1 Folder/Category Name	Displays folder/category name in the list
2 Category List	Displays currently playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Root Folder

Features	Description
5 Menu	<ul style="list-style-type: none"> • Add to Playlist : Adds the current track to the Playlist : Playlist is placed on the left tab in the list (Maximum 100 files) Select a track and press “Add to Playlist” to add the track in the playlist • Delete from Playlist : Select a track from the playlist and press “Delete from Playlist” to delete the track in the playlist • Delete Files: Deletes files from My Music <p>i If delete file from My Music, the information related to song also deleted in the list.</p> <p>Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)</p>
6 SEEK/ TRACK	<p>If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning <p>If press button long (over than 0.8 seconds) it will rewind/fast-forward the track</p>
7 TUNE	<p>Turn the TUNE knob to move the focus to previous/next file. If the file you want to play is displayed, press TUNE knob to play the track.</p> <p>i If the TUNE knob is not pressed within 5 seconds of searching tracks, Tune search will be terminated.</p>

03

part.3 Using Bluetooth

Before Using the Bluetooth[®] Handsfree
Bluetooth Connection
Bluetooth Phone

Using Bluetooth

Before Using the Bluetooth® Handsfree

What is Bluetooth® Wireless Technology?

- Bluetooth® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, Bluetooth® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Navigation system.

- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the Kia Motor website
- Kia Motors Corp : <http://www.kia.com/us/bluetooth>

Precautions for Safe Driving

- Bluetooth® Handsfree is a feature that enables drivers to practice safe driving. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using Bluetooth® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- **Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.**

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features
- Even if the phone supports Bluetooth® Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/connecting with the head unit.
- If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
 2. Turn the mobile phone power OFF/ON and try again.
 3. Completely remove the mobile phone battery, reboot, and then again.
 4. Reboot the Audio Navigation System and try again.
 5. Delete all paired devices from both of Phone and HU sides and then try again
- The handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- When downloading contacts, phenomenon not described within this user's manual may be related with the mobile device. When such occurs, inquire within the mobile phone manufacturer.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

 
Select **PHONE** in the head unit or .

in the steering wheel remote control. ►

Select **YES**. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Select **SETUP** in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select **Add New Device**. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

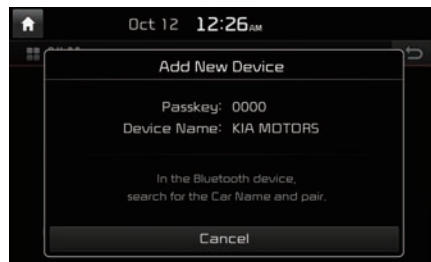


The default passkey is 0000.

 
The device name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Select **PHONE** in the head unit or  in the steering wheel remote control. ► Select the name of the device to connect. ► Connect Bluetooth.

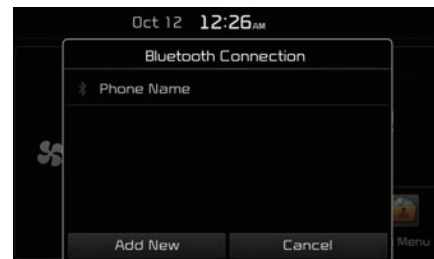

Connecting Devices Through the Phone Settings

 
Select **SETUP** in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select the name of the device to connect. ► Connect Bluetooth.

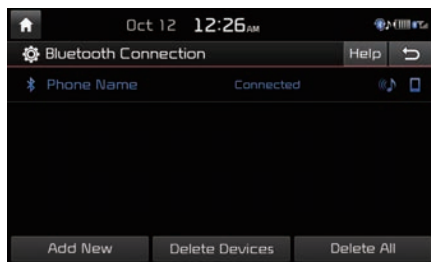

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.

 Select **SETUP** in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select the name of the device to disconnect.

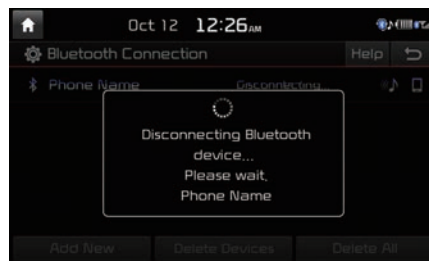

Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

 
Select **SETUP** in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select **Delete Devices**. ► Select the device name to delete. ► Select **Delete**.









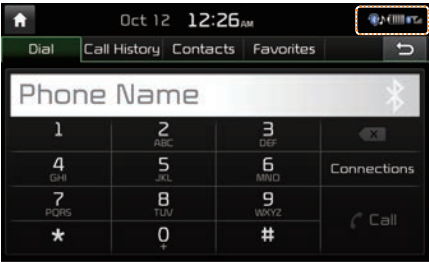


Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.




Icons	Description
	You can use Bluetooth phones when a Bluetooth hands-free connection is established.
	You can use Bluetooth audio features when a Bluetooth audio connection is established.
	You can use Bluetooth phones and audio features when both Bluetooth hands-free and audio connections are established.
	Call signal strength indicator
	Battery level of the Bluetooth devices connected
	Downloading Call History list
	Downloading Contacts
	In a Bluetooth phone call
	Microphone muted

 
i Information

- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining

Dial

Dials a call after the Bluetooth devices are connected.

- Select **PHONE** in the head unit or  in the steering wheel remote control. Select **All Menus** from the full screen display ► **Phone**.

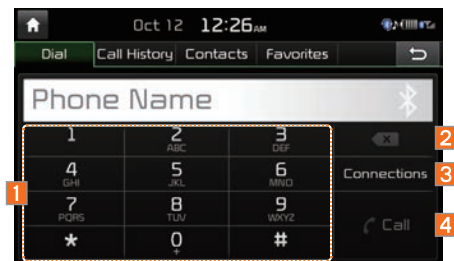


Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Press and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone
2 Delete	Delete the numbers that you entered.
3 Connections	Moves to a screen for making a Bluetooth connection.
4 Call	Makes a call after you dial a number and select CALL. If the number is listed in Dialed Calls, you can select the number and press CALL to automatically dial that number again.

i Information

- Some types of mobile phones may not support the Speed Dial function.

 Accept/Reject Call

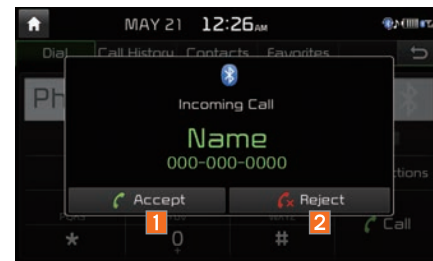


If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

Name	Description
1 Accept	Answers the call.
2 Reject	Ignores the call.

i Information

- In some mobile phones, the caller's number may not be displayed, and the Ignore feature may not be supported.

 Using the Menu During a Phone Call

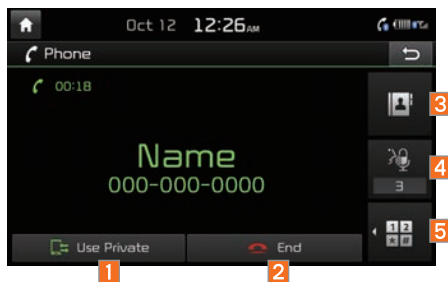

When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car hands-free to the mobile phone.
2 End	Ends a call.
3 Contacts	Displays the Contacts list.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

 
i Information

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth hands-free, you cannot access other modes, such as AV and Settings. You can switch to in-call volume control and navigation modes only.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

Select **PHONE** in the head unit ► and then

Call History .

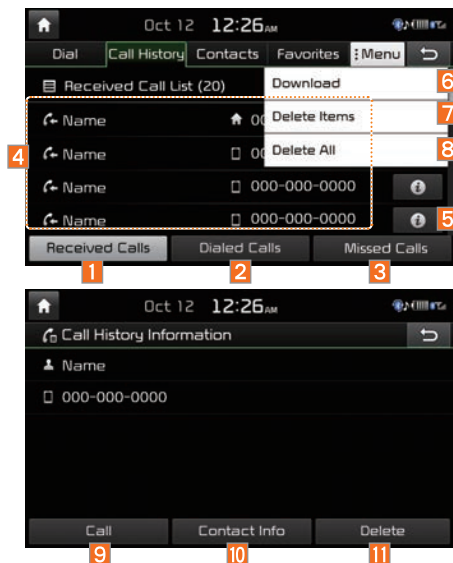

Name	Description
1 Received Calls	Lists the calls that you have received.
2 Dialed Calls	Lists the calls that you made.
3 Missed Calls	Lists the calls you missed.



Name	Description
4 Call History	Displays all of your call history. Select from the list to dial the number.
5 Information	Displays the details of your call history information.
6 Download	Downloads the call history information from your mobile phone.
7 Delete Items	Deletes the items that you select from your Call History Information.
8 Delete All	Deletes all of the items from your Call History Information.
9 Call	Dials the selected number in your Call History Information.
10 Contact Info	Goes to the Contact Information screen if the number has been stored.
11 Delete	Deletes your call history information.

i Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 20 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- The Recent option is not supported for sorting all calls.
- While the call history download is in progress, the status bar displays an icon (i).
- If the call history download is turned off with the Bluetooth device, the download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth settings or display status are normal.
- Some devices do not support downloading. Check if your Bluetooth device supports downloading. For details regarding Bluetooth-supported devices and their functional compatibility, visit the following web sites:
- Kia Motors Corp : <http://www.kia.com/us/bluetooth>


Contacts

  Select **PHONE** in the head unit ► and then **Contacts**

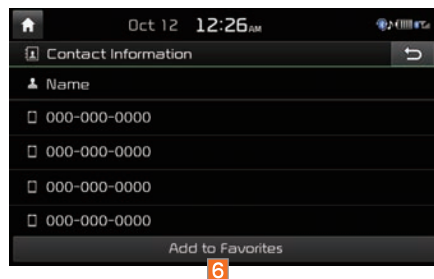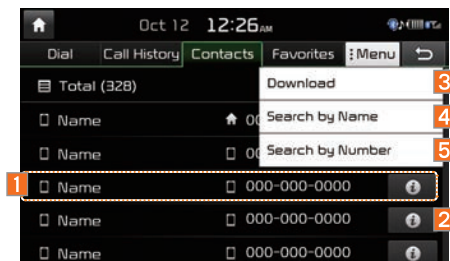

Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Information	Displays contact information.
3 Download	Downloads contacts from your mobile phone.
4 Search by Name	Searches Contacts for the name that you enter.
5 Search by Number	Searches Contacts for the number that you enter.
6 Add to Favorites	Adds a phone number to Favorites.

 
i Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit and delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the head unit. Keep your important data in a safe place.
- Depending on differing mobile phone models and conditions, the time for transferring and downloading contacts may vary.
- If you download contacts from your phone, the existing data will be deleted.
- By default, contacts from both the SIM card and your mobile phone are downloaded at the same time.
- While downloading contacts, the status bar displays a ().
- If the contacts download function is turned off on the Bluetooth device, the download will not be available.

- Some devices require a device authentication for downloading your contacts. If download fails, check if the Bluetooth settings or display status are normal.
- Some devices do not support downloading. Check if your Bluetooth device supports downloading. For details of Bluetooth-supporting devices and their functional compatibility, visit the following web sites :
 - Kia Motors Corp : <http://www.kia.com/us/bluetooth>

Favorites

Select **PHONE** in the head unit ► and then **Favorites** .

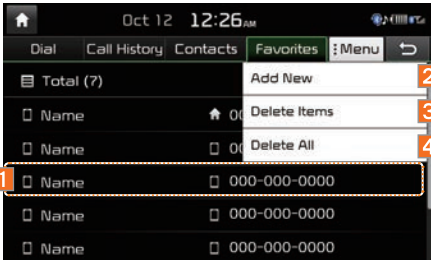

Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Add New	Adds a new number to Favorites.
3 Delete Items	Deletes numbers that you select from Favorites.
4 Delete All	Deletes all of the numbers from Favorites.

MEMO

part.4 About Using UVO eServices

Before Using UVO eServices
UVO eServices

04

About Using UVO eServices

 
Before Using UVO eServices

To use UVO eServices features, pair and connect your smartphone with the vehicle. For information on connecting your Bluetooth device, refer to the smartphone user's manual and Bluetooth instructions in Quick on your radio.

UVO eServices

You can call Roadside Assist or the eServices Guide via a phone connected by Bluetooth.

- Select **UVO** in the head unit.

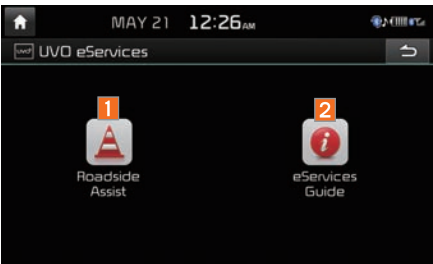


Name	Description
1 Roadside Assist	If a diagnostic issue exists, you can connect with a Roadside Assist agent.
2 eServices Guide	Receive guidance on how to use UVO eServices

Roadside Assist

If a diagnostics issue is found, you can connect with a Roadside Assist agent. The Roadside Assist feature can be used only when your phone is connected via Bluetooth.

 - Select **UVO** in the head unit ► and then **Roadside Assist**.

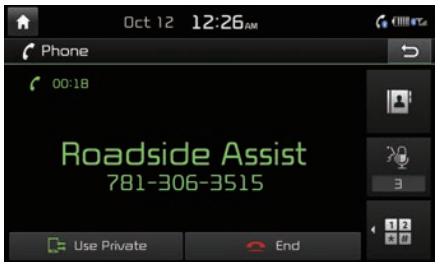


eServices Guide

eServices Guide provides guidance on how to use UVO eServices.

This feature is only available when the mobile phone is connected via Bluetooth.

 - Select **UVO** in the head unit ► and then **eServices Guide**.

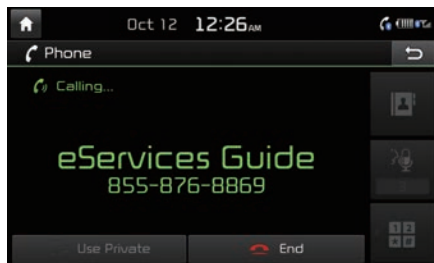

MEMO

05

part.5 Navigation

Basic Features

Search

Route

Navigation Settings

 
Before Thinking There is a Product Defect

Navigation

Basic Features


Operating Navigation Screen

A basic features on the map screen.

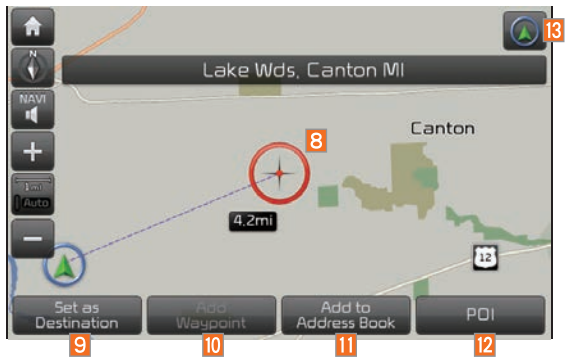

	Name	Description
1		Move to the Home screen.
2		Change the map view mode.
3		Mute On/Off.
4		Zoom in the map.
5		Set the zoom level automatically according to the guidance.
6		Zoom out the map.
7		Quick and easy selection of a destination and options.
8		Touch to scroll the map.
9		Quick and easy selection of a destination from the map screen.
10		Set a waypoint to the current route.
11		Store frequently used address to address book.
12		Find a POI(Point Of Interest) around the current position.
13		View the vehicle's current position on the map screen.

 Changing Map View

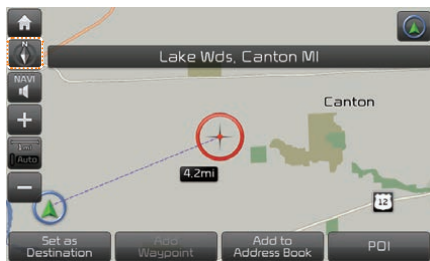

Touch the compass arrow icon to toggle between a map oriented to the North, or oriented parallel to the vehicle's heading.

Voice Guidance Volume On/Off

 
Press the button to toggle the voice guidance between on or off.



Zoom In /Zoom Out

zoom the screen in and out.

Zoom In and Zoom Out

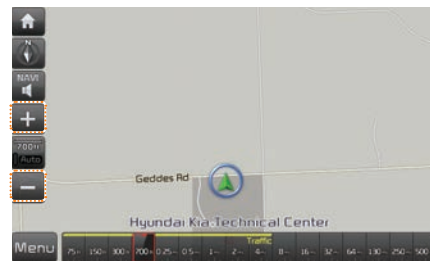
 


Press **+** or **-** to set the zoom level

Map Scale

Set the zoom level automatically according to the road class




Name	Description
 Scale Fix	Fix the displayed scale
 Auto Scale	Change the map scale automatically depending on the road class

Menu

 
Route



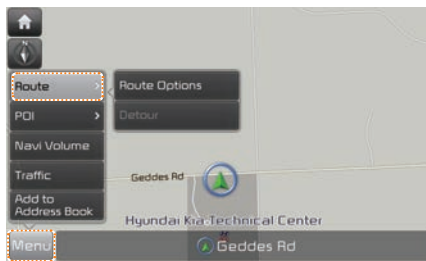

 Press **Menu** button on the bottom left of the screen ► Press **Route** button

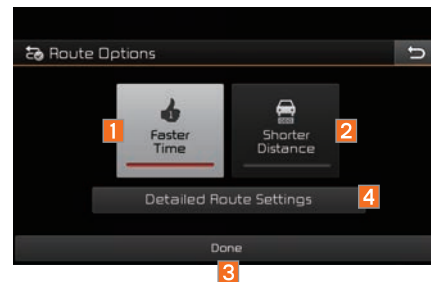


Press the **Route** button to set **Route Option** and **Detour**.

Route Option




Name	Description
 Faster Time	Set an option based on the fastest time of arrival.
 Shorter Distance	Set an option based on a shorter distance.
 Done	Store the option. While the destination is set, use the selected option to calculate the route immediately.
 Detailed Route Settings	Set details.

 
Detour

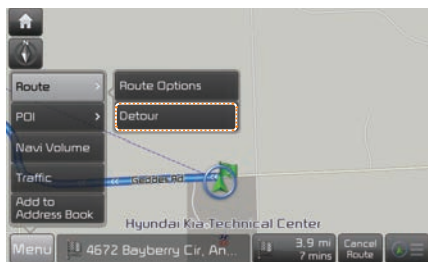

 The **Detour** button is activated only when the route is planned.

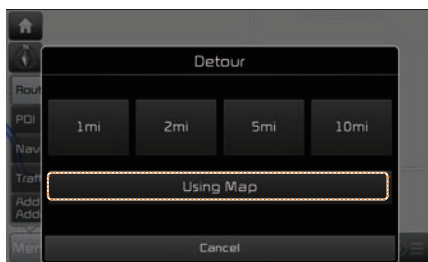

 Try to find a different route to make a detour within a selected distance ahead from current vehicle's position.

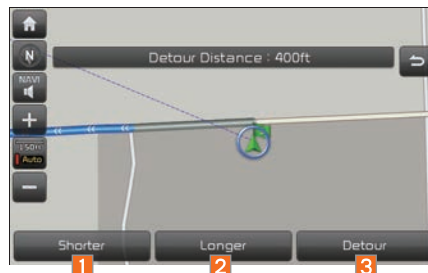


Press the **Using Map** button to set the section to avoid the current route on the map.

Name	Description
1 Shorter	Reduce the length of the section to avoid.
2 Longer	Increase the length of the section to avoid.
3 Detour	Start the calculation of the route by detouring the set section to avoid.

Navigation Volume

 Press the **Navi Volume** button to adjust the volume.

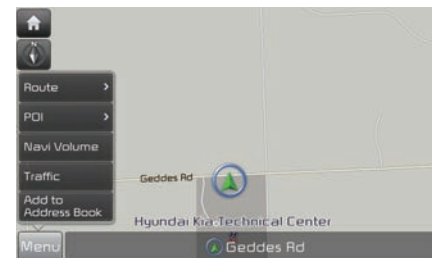

Press the **Navi Volume** button.




Name	Description
1	Set the sound to mute.
2	Reduce the volume.
3	Increase the volume.
4	Slide to set the volume

Nearby POIs

Display the information on nearby POIs on the map and to search and edit.


View Nearby POIs

 Select the **Menu** on the bottom of the left screen ► Select the **POI** button.

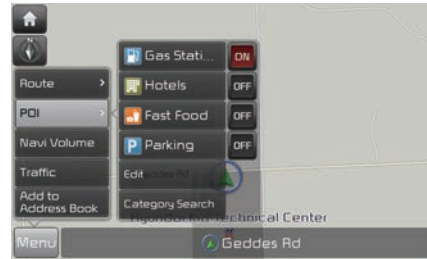


Press **ON**, **OFF** button to display or disappear the relevant POI information as an icon on the map. To select the sub-business type of the POIs move to the list. Select the desired business type (ex. gas station).

 The list of gas stations nearby is displayed.

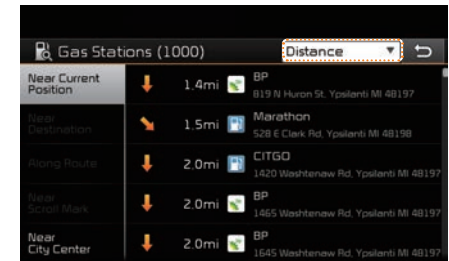


Display in order of distance, name by price.

 Select the desired gas station to check the location information.

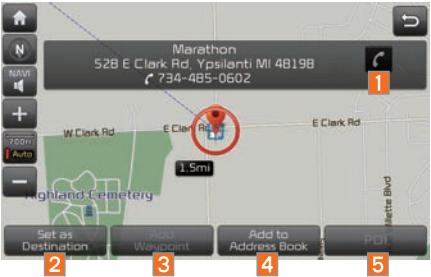


Name	Description
1	Make a call the place (After pairing a phone with a Bluetooth)
2	Set the place as a destination.
3	Set the location as a waypoint.
4	Store the location.
5	Search nearby POIs.

 
• Editing

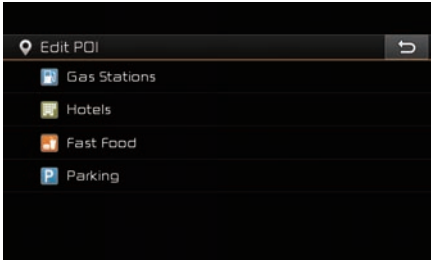

 
Select the item to edit (ex. gas station).

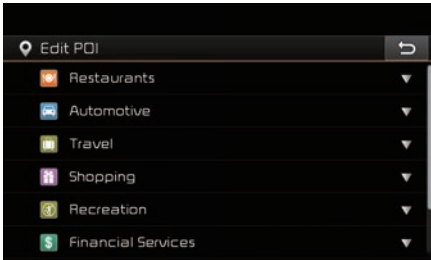

 Select the desired item (ex.restaurants).

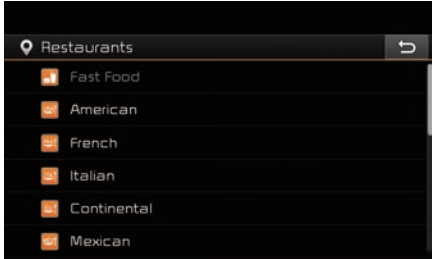

 
Select the item to change (ex. American).

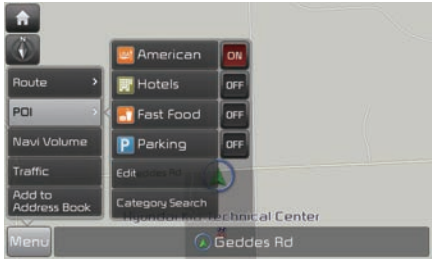

Gas Stations now changed to American .


• **Searching POI categories**

 Select the **Menu** button on the bottom left of the screen. ► Select the **POI** button. ► Select the **Search POI** button. ► Select the desired item.


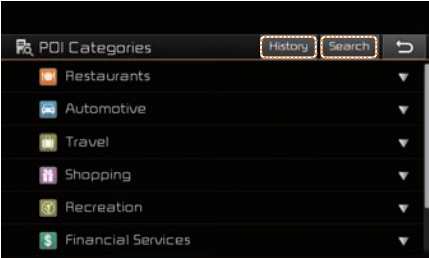


Select the item to search.

 Press the **History** button to check the previous search result.

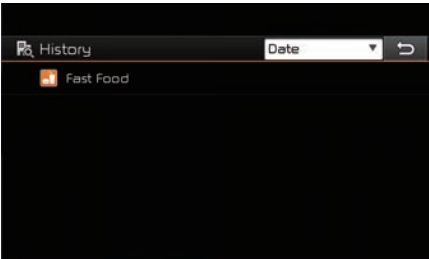

  Press the **Search** button to search the POI category by name.

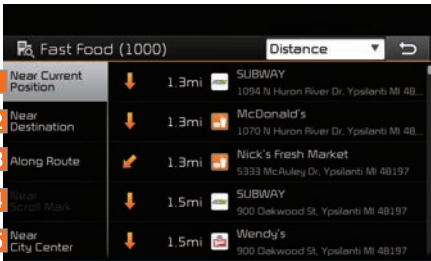
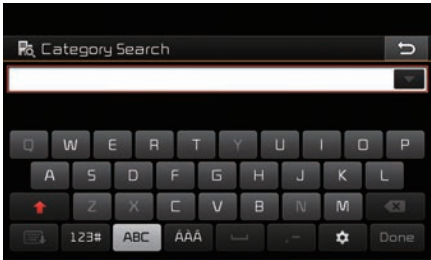


Select the desired POI to check the location and the detailed information.

Name		Description
1	Near Current Position	Search POI's around the current position.
2	Near Destination	Search POI's around the destination. i Active only when a route's planned
3	Along Route	Search POI's along route. *Active only when a route's planned
4	Near Scroll Mark	Search POI's around the current cursor when the map scrolled. i Active only when the cursor position is different from the vehicle position
5	Near City Center	search POI's around the city selected

Traffic List

  Press the **Menu** button. ► Select the Traffic button.

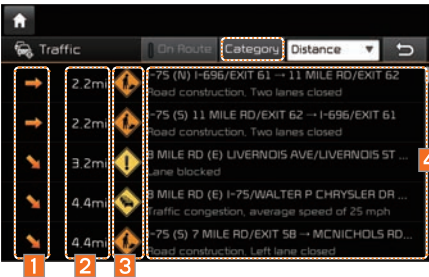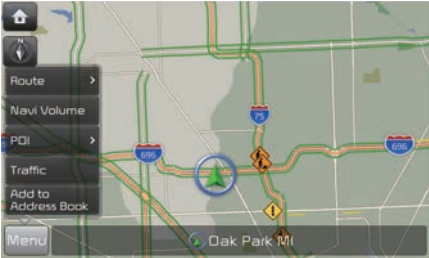

On the traffic list, the current traffic/road event information is basically displayed in order by distance.


Name	Description
1	Direction from the current location.
2	Distance from the current location (mi or km)
3	Display a symbol depending on a traffic information event type.
4	Traffic information event section and event name

Additional traffic information may be displayed upon clicking on the button **Category**




Name	Description
1	Display 'road construction' information
2	Display 'Accident' information
3	Display 'Slow traffic' information
4	Display 'Incident' information
5	Display 'Hazardous road conditions' information
6	Display 'Travel information'

 In case of the traffic information on route, On Route is activated.

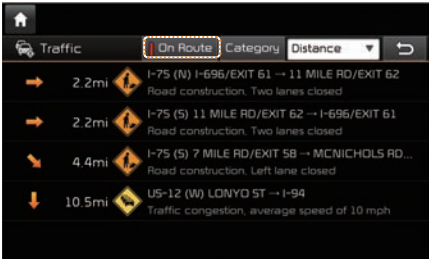

 If there is a route planned, the On Route marker is activated in red and traffic events list on route displayed.
Active only when incidents reported on route

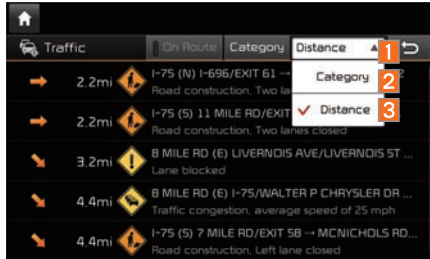


On the traffic list, the current basic traffic/road event information is displayed in order of distance.

Select the combo box to change the arrangement in order of distance/category.

Name	Description
1	Select the combo box to arrange.
2	Arrangement by category : Display traffic information arranged in order of traffic information event type.
3	Arrangement by distance : Display the traffic information in order of distance closer to the current location.

Traffic detail

 Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

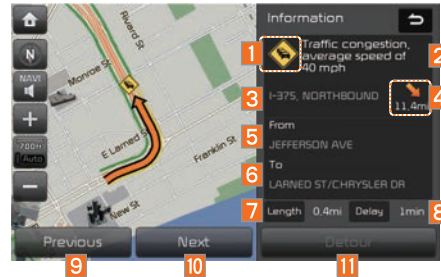

Select the traffic information on the traffic list to display the detailed screen as shown in the screen.

Display the traffic information symbol and the arrow indicating the section on the map screen and display the information on events and sections on the information window on the right side in detail.


Name	Description
1	Event symbol
2	Traffic information event name
3	Traffic information road number or road name (direction included)
4	Direction and distance from the current location
5	Crossroads starting the traffic information section
6	Crossroads ending the traffic information section
7	Length of traffic information section
8	Traffic information added delay time
9	View previous traffic information
10	View next traffic information
11	Detour the route with the traffic information (in case of traffic information on the route).

Traffic detour


Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

If there is traffic information on the route, it is possible to detour the route with traffic information and search other routes.


 
When the Detour button is enabled in the View Traffic Detail, press the Detour button to detour.

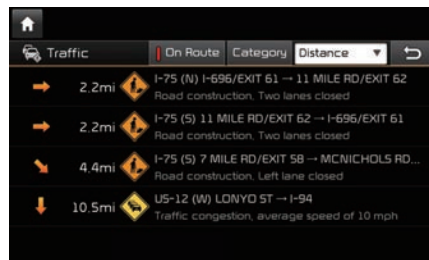

Select the desired section.

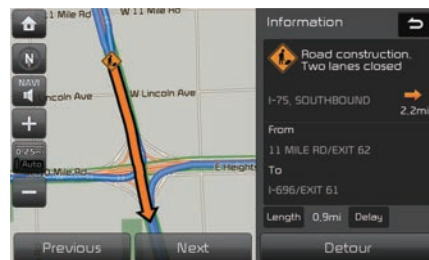 

  
Check the information and press the **Detour** button.

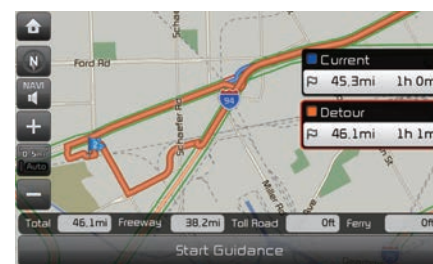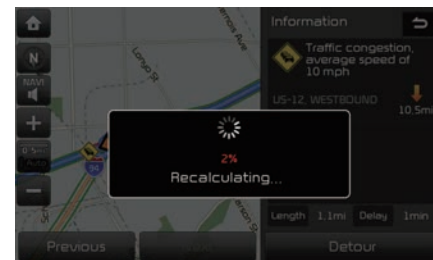

Press the **Start Guidance** button to apply the detoured sections and search other routes.

Traffic popup

 Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

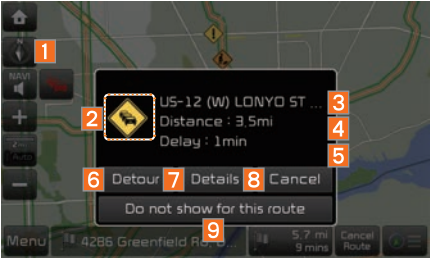

If there is traffic information of “red traffic flow” on the route, traffic information pop up is displayed and the icon on the left is created.


On the traffic information popup window, brief information is displayed and Details and Detour can be selected.

If you do not want to pop up anything on the current route, select Do not show for this route.


Name	Description
1	Popup icon
2	Traffic information symbol
3	Road information in the traffic information section
4	Distance from the current location
5	Traffic information delay time
6	Traffic information detour search menu
7	Traffic information details menu
8	Popup close menu
9	Set not to display pop-ups on the current route.(Maintained until the destination is reset and the route is searched)



 On the traffic information pop-up, select Detour or Details to perform the same operation.

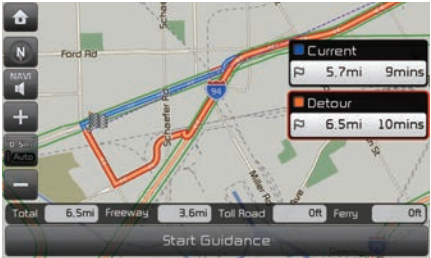

 
Press Detour to check the corresponding information.

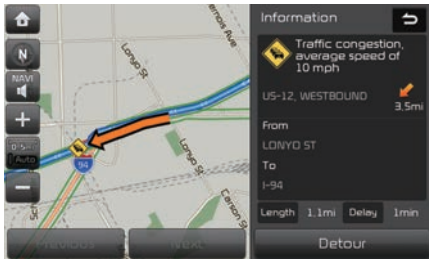

Select Details to check the corresponding information.

Add to Address Book

 Press the button on the left bottom of the screen. ► Select the **Add to Address Book**

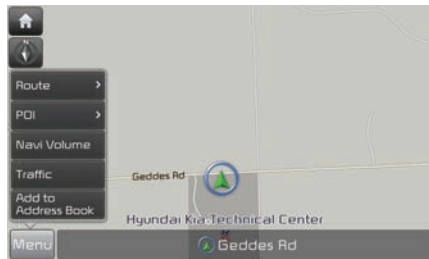

To store the location on the current map to the address book.



Name	Description
1	Change the name.
2	Press the ON , OFF button to display on the map.
3	Enter the phone number.
4	Possible to register Symbol
5	Change the stored Folder
6	Designate to the Favorit item. When the favorite is designated, press the button on the bottom of the Destination menu and request the route guide immediately.
7	Press the ON , OFF button to set the sound notification.
8	Save the setting.

Search

Address

Set destination by address search.


Press the NAVI head unit key. ► Select the Destination tab. ► Select the Address icon.



How to Search Address



Name	Description
1	First select the state to search.
2	Enter the house number. If you don't know the house number, press the Skip button.
3	Enter the street name. To allow actually existing street name only to be entered, the keys on the keyboard are automatically enabled or disabled, and if necessary, words are automatically completed. Press the Done button to display the corresponding street name and then select the item. If there are several cities with the same street name, the list of cities is displayed. Otherwise, enter a city on the keyboard and select the street and then the address search is completed.
4	Before entering the street, possible to select a city. Search by address only based on the streets in the city.

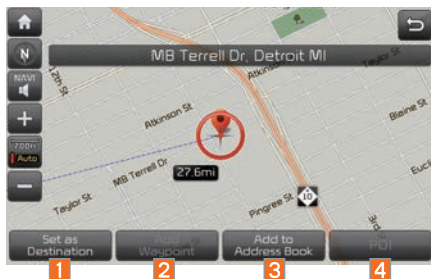 


Enter the address to check the location information on the map.

Name	Description
1 Set as Destination	Set the location as a destination.
2 Set as Waypoint	Set the location as a waypoint.
3 Add to Address Book	Store the location.
4 POI	Search nearby POIs.

Previous Destination

Search destination with the previous search information.

 
Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Previous Destination** icon.

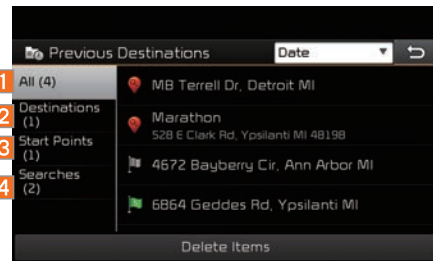

Possible to arrange by all, latest destinations, latest searched places, and latest departing places.

Possible to arrange in order of date and name.

Name	Description
1 All	Display all destinations, departing places, and searched places.
2 Destinations	Display previous destination places for route guidance
3 Start Points	Display previous departing places for route guidance
4 Searches	Display previous searched places for route guidance. i But, not displayed when the searched places are set as destination.

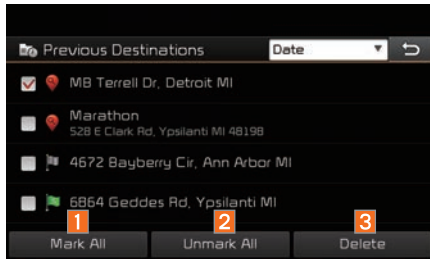 


Press the **Delete** button to delete the information.


Name	Description
1 Mark All	Select all.
2 Unmark All	Deselect all.
3 Delete	Delete the selected item(s).

POI Name

 
Press the **NAVI** head unit key. ► Select the **Destination** tab. ► Select the **POI Name** icon.

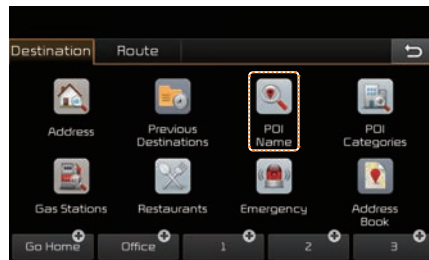

 Search POI Name to search the destination.

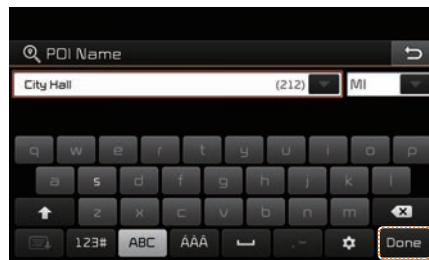

 
Enter the desired facility name and press the **Done** button.

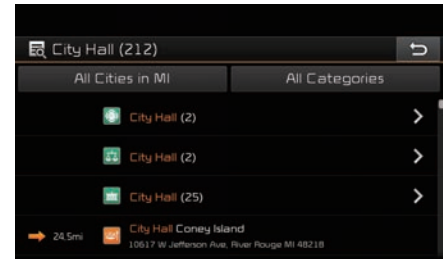

Possible to select the desired destination among the search items.

POI Categories

 
Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **POI Categories** icon.

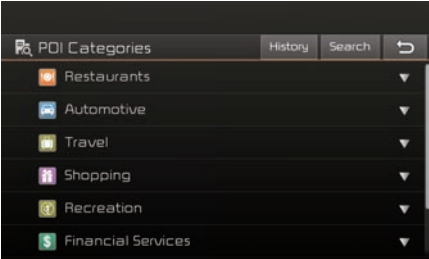

Select the desired item.



 Select the desired item in the sub-category.

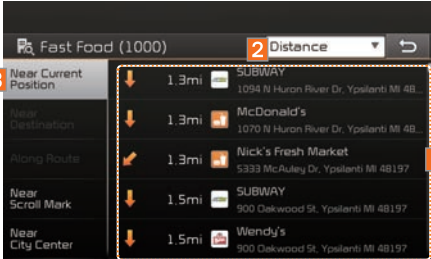


Name	Description
1	Select the desired destination among the searched items and add it as a way point.
2	Arrange in order of Distance and Name.
3	Arrange in order of Near Current Position, Near Destination, Along Route, Near Scroll Mark and Near City Center.

Gas Station

Search a gas station.

 Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Gas Stations** icon.

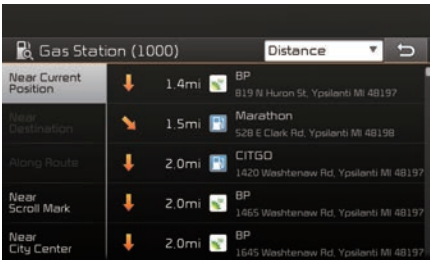


Possible to select the desired destination among the searched items.

Restaurants

Search a restaurant.

 Press the **NAVI** head unit key. ► Select the **Destination** tab. ► Select the **Restaurants**

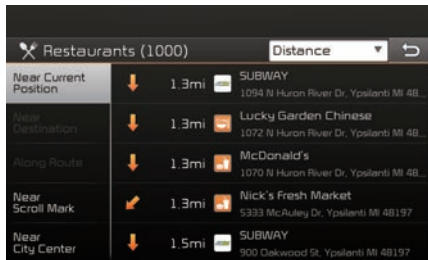


Possible to select the desired destination among the searched items.


Emergency

Search an emergency facility.

 Press the **NAVI** head unit key. ► Select the **Destination** tab. ► Select the **Emergency**

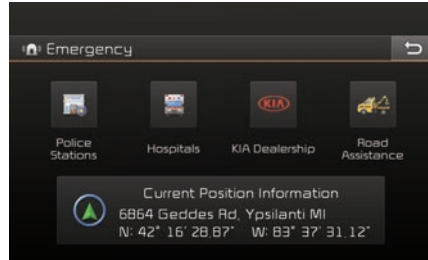

 Possible to check the current location information and select the desired item in the sub-menu (ex. police station).

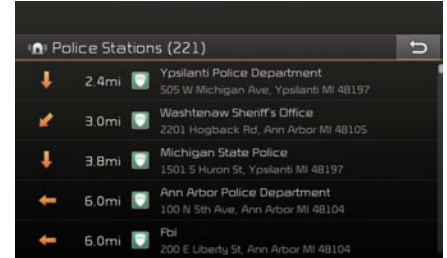


Possible to select the desired destination among the searched items.


Address Book

Search the destination with the address book.

 Press the NAVI head unit key. ▶ Select the Destination tab. ▶ Select the Address book

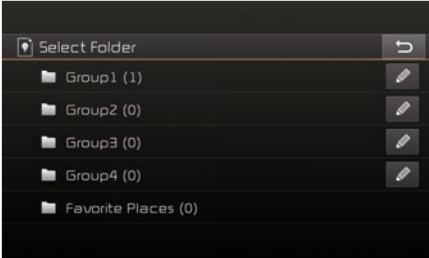

 Select the desired group.
Store it in the Favorite Places and then set the route rapidly with Go Home, Office and three buttons on the bottom of the menu screen.

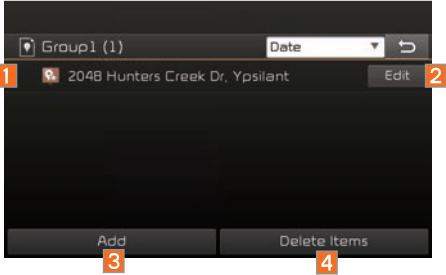

Name	Description
1	Possible to select the desired destination from the searched items.
2	Possible to edit the destination.
3	Possible to register a new destination.
4	Possible to delete the desired item.

 
Specially Registered Places

Set the route with the specially registered places.


Press the **NAVI** head unit key. ► Select the **Destination** tab. ► Select the Specially Registered Places button.




On the button where locations are not registered, the **+** icon is displayed. When a location is registered, the **+** button disappears and the buttons 1 to 3 are displayed as the registered place names.

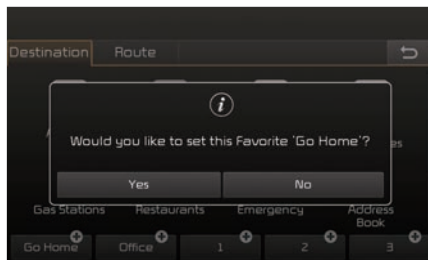

 Press the **Go Home** button and then popup appears. Press the **Yes** button for setting.

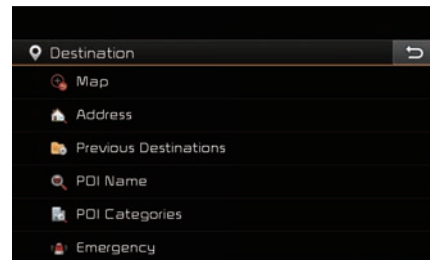

 
Register **My Home** in various searching methods. By using the same methods, possible to register Office, Special 1, Special 2, and Special 3.

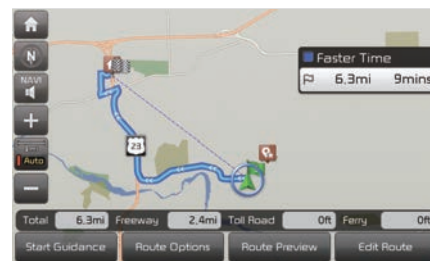

Press the registered special point button to search a route as shown above.


Route Setting

 After searching the destination, possible to set a route.

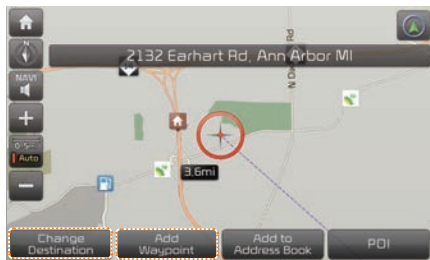


While the destination is set, the buttons **Change Destination** and **Add Waypoint** appear. Press each button to change a destination or add a waypoint.

 Destination Setting(Change)

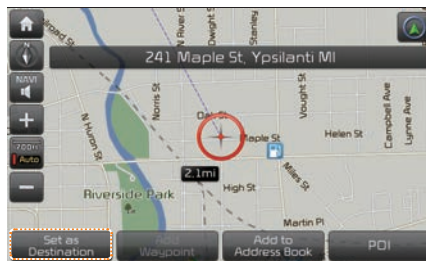

After searching the destination, press the **Set as Destination** button to set the location as a destination and search a route.

 All Routes

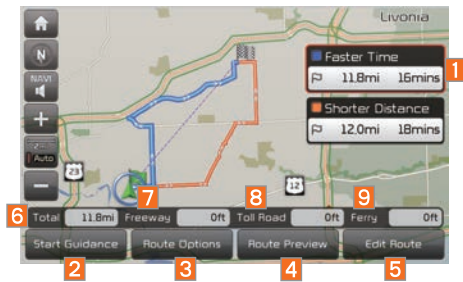


When the Alternative Routes option is enabled in Navigation Setting, display two routing options based on faster time and shorter distance.

- **Faster Time** : Select time-optimized route, being the fastest roads.
- **Shorter Distance** : Select short distance, irrespective of how fast or slow progress will be


Name	Description
1 Faster Time	Display total distance, travel time, and toll fees. Select the desired route.
2 Start Guidance	Start the guidance with the route.
3 Route Options	Change the route option.

Name	Description
4 Route Preview	Preview turn-by-turn list.
5 Edit Route	Edit the route.
6 Total	Display total distance of the route
7 Freeway	Display length of freeway on the route
8 Toll Road	Display length of toll road on the route
9 Ferry	Display length of Ferry route on the route

 
The route will be calculated using the option “Faster Time” by default.

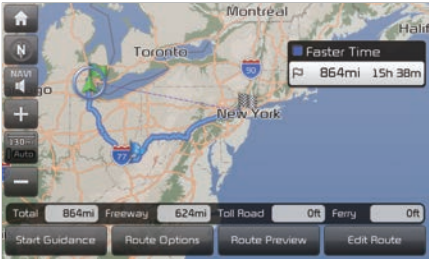

 
Alternative routes can be suggested if necessary, **SETUP** key ► **Navigation** Icon ► **Route** ► **Alternative** : on

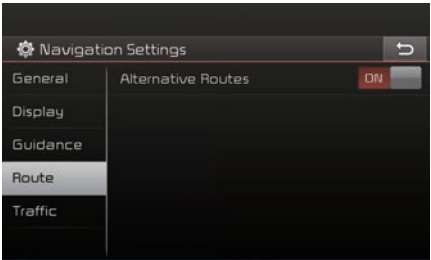

Adding Waypoint

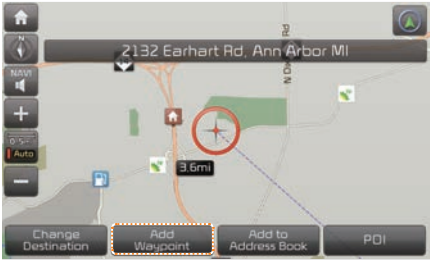 


 Press the **Add Waypoint** button to set the position as a waypoint and search the route.

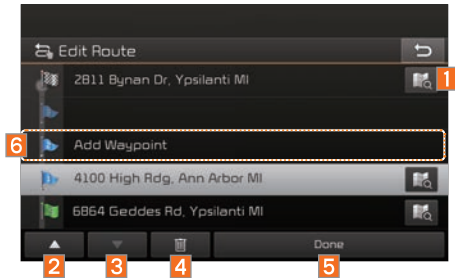


Name	Description
1	Possible to check the map information of the section.
2	Move to the previous section.
3	Move to the next section.
4	Delete the selected section.
5	Edit the route.
6	Add the waypoint.

 Registering Location

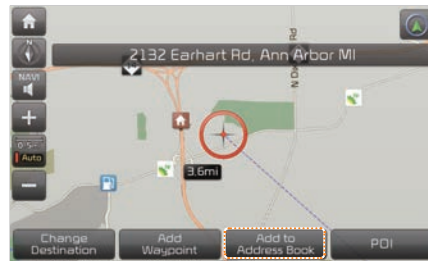

 Press **Add to Address Book** at the desired location to register the location.


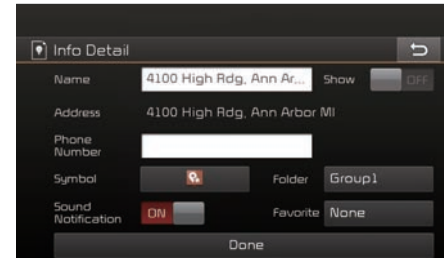


Enter the detailed information of the location to store.


Route Guidance

Possible to get the detailed information on route guidance.

  Route Guidance Screen

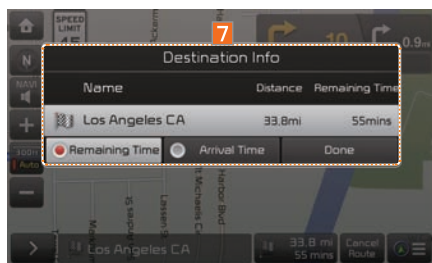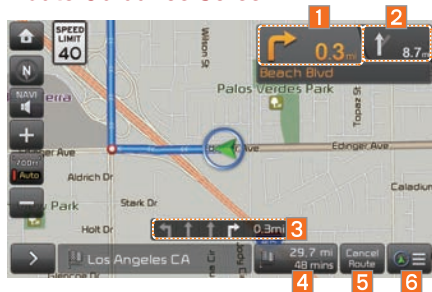

 
Remaining time : Display he estimated time of arrival

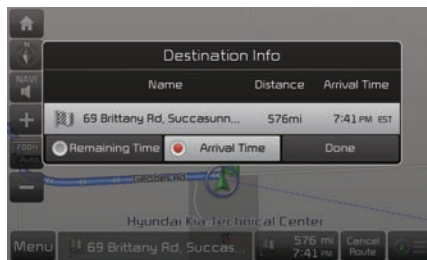

Arrival Time : Display the time for arrival


Name	Description
1	Display the distance and direction to the first turn point.
2	Display the distance and direction to the second turn point.
3	Display the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.
4	Displays the distance to the destination and the estimated time of arrival. Press the button to check the detailed information.
5	Cancel the route.
6	Possible to change to preliminary guidance, TBT guidance, and zoom-on guidance screens.
7	Displays the destination information.

  
Split Screen during Route Guidance

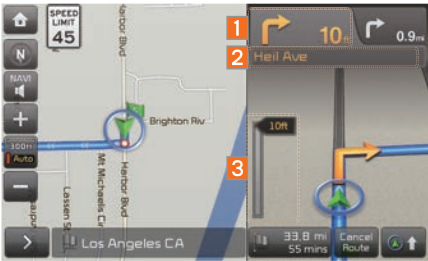



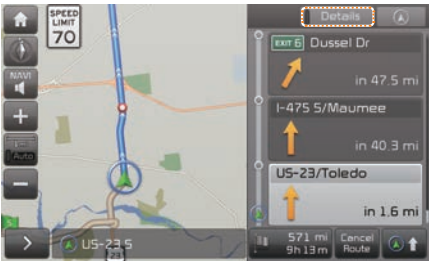

Approaching the turning point, the detailed road and travel information is automatically displayed on the right side of the screen.


Name	Description
1	<ul style="list-style-type: none">Turn Point : Display direction and shape to turn shortlyDistance to turn : Display distance to next turn point
2 Heil Ave	Road name to maneuver : Info of the road
3	Detail Distance Bar : Display distance to next turn point.




Touch the  button to toggle display view mode as below

Name	Description
	Display the full map screen.
	Junction View, Split screen. (Active only when the applicable images are ready)
	Display Turn-by-turn information

  additional info can be displayed on Freeway

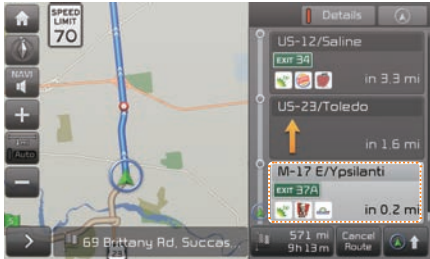

Additional info of Freeway exit or Rest area can be displayed by pressing the button 

Detailed information for POIs around freeway exit is listed by pressing POI symbols.

POI Around Exit		Distance	
EXIT	0.2mi	McDonald's	5550 W Michigan Ave, Ypsilanti MI 48197
EXIT	0.2mi	Sunoco	5511 W Michigan Ave, Ypsilanti MI 48197
EXIT	0.3mi	BP	5495 W Michigan Ave, Ypsilanti MI 48197
EXIT	0.3mi	Harvest Moon Cafe	5484 W Michigan Ave, Ypsilanti MI 48197
EXIT	0.3mi	JB's Pizza and Grinders	5561 Carpenter Rd, Ypsilanti MI 48197

Route

Canceling Route

 
Cancel the route.

Press the **NAVI** hard key. ▶ Press the

Route tab. ▶ Select **Cancel Route** .



Click **Cancel Route** the icon.

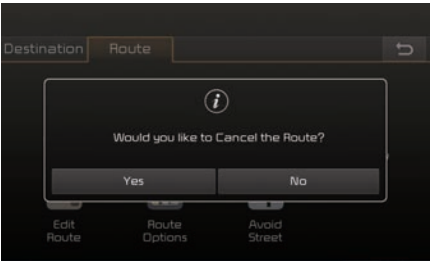

Press the **Yes** button to cancel the route.

Display Route Information

Press the **NAVI** hard key. ▶ Press the

Route tab. ▶ Select **Route Info** .



Press the **Route Info** icon.



Possible to check the information on the route. Select the desired item to check the map information.

Click the **Avoid Street** button to avoid the street or road.



 
Check the desired item and press the **Done** button to finish.

Route Overview


Check the information on route including the distance, expected time, toll fees, etc.

Press the **NAVI** hard key. ▶ Press the

Route tab. ▶ Select **Route Overview**.

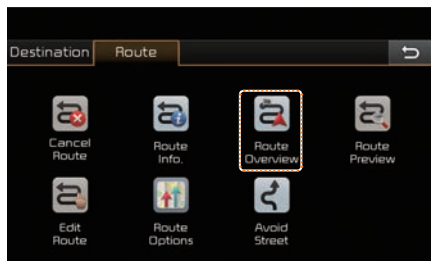

Press the **Route Overview** icon.

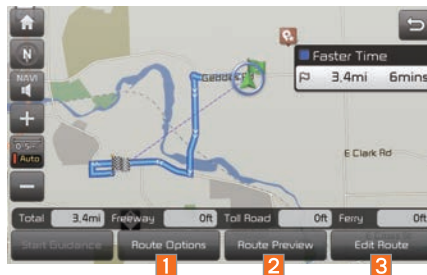 

Name	Description
1 Route Options	Change the search option.
2 Route Preview	Preview turn-by-turn list.
3 Edit Route	Provide information on surrounding facilities.

Route Preview

 
Check the detailed turn-by-turn list.

Press the **NAVI** hard key. ▶ Press the

Route tab. ▶ Select **Route Preview**.



Press the **Route Preview** icon.

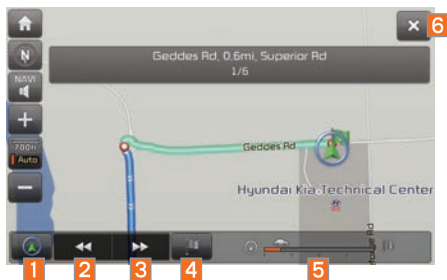

Name	Description
1 Departure Place	Move to the departure location.
2 Previous Button	Move to the previous maneuver.
3 Forward Button	Move to the next maneuver.
4 Destination	Move to the destination location.
5 Section Displaying Bar	Quick move to the specific position.
6 X	Close the route preview.

Editing Route

Edit the current route.

Press the **NAVI** hard key. ► Press the


Route tab. ► Select **Edit Preview**.



Press the **Edit Preview** icon.



Name	Description
1 ↩	Display the selected point on the map screen.
2 ▲	Move the selected item up.
3 ▼	Move the selected item down.
4 🗑	Delete the selected item.
5 Done	Press the Done button to finish editing.
6 + Add Waypoint	Press the button + Add Waypoint to add a waypoint.

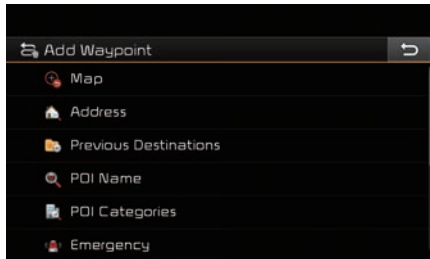 


Add the waypoint through various searching methods.

Route Options

Press the **NAVI** hard key. ► Press the **Route** tab. ► Select **Route Options**.



 Press the **Route Options** icon.

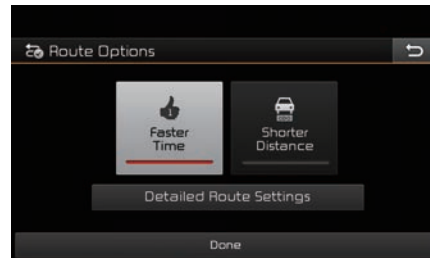

Designate the route options to guide the route.

 
Avoid Street

Search new route by avoiding the selected street(s).

Press the **NAVI** hard key. ► Press the **Route** tab. ► Select **Avoid Street**.



Press the **Avoid Street** icon.

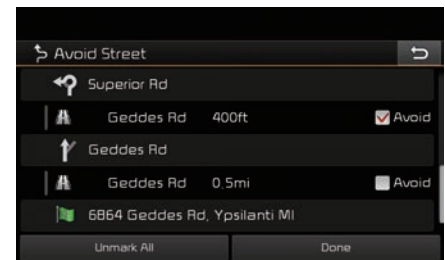


Press the **Done** to plan new route after selecting the street(s) that you want to avoid.

Navigation Settings

General

 Change general settings.

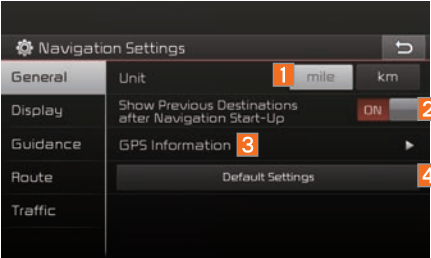

Name	Description
1	Change the unit of mile , Km .
2	Press the ON , OFF button to change the previous destination view setting when starting the navigation. When the navigation is started without the route planned, a list of previous destinations can be displayed or not by setting.
3	Check the GPS information.
4	Press the Default Settings button to initialize.




Press the [GPS Information] to display the detail GPS satellites information

Name	Description
1 Receiving	Active when current position is fixed
2 Searching	Active when current position is being calculated
3 Speed	Display current speed of the vehicle
4 Location	Display current position of the vehicle
5 Elevation	Display current elevation of the vehicle
6 Time	Display time
7 Date	Display date

Display

 Change the display environment settings.

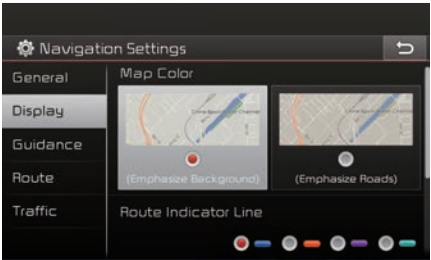


Change the map colors and the route guidance line colors.



Change the vehicle symbol.

Guidance

 
Change the guidance setting.

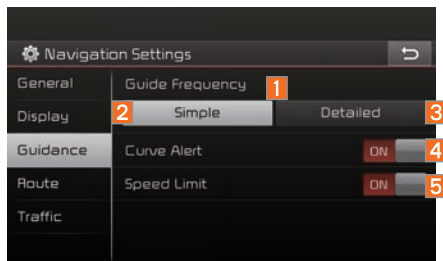

Name	Description
1	Set the guide frequently
2	Less guidance will be given
3	Much guidance will be given
4	Press the ON or OFF button to change the curve alert setting.
5	Press the ON or OFF button to change the speed limit alert setting.

Route

 Change the route setting.

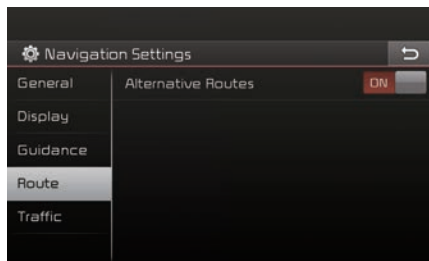

Press the **ON** or **OFF** button to change the [Alternative Routes] setting.

- Alternative on : Alternative routes will be suggested(depending on the route preference between “Faster time” and “Shorter Distance”

 


NOTICE

- Alternative routes can be shown only while the vehicle is not moving.
- Alternative off : No alternative routes will be suggested. Guidance will start right after calculating with the route preference (Faster time or Shorter distance)

Traffic

Change the traffic information setting.

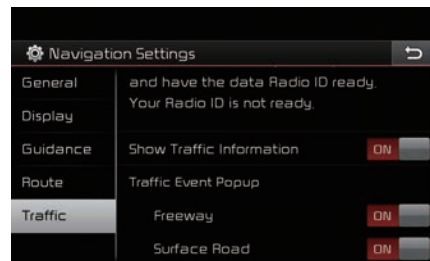

Press the **ON** or **OFF** button to change the settings.

- Show Traffic Information On/Off : Select whether to display traffic information or not
- Traffic Event Popup Freeway On/Off : Select whether to display popup message for traffic information on freeway
- Traffic Event Popup Surface Road On/Off : Select whether to display popup message for traffic information on surface road.

Before Thinking There is a Product Defect

The current position as shown on the navigation may differ from the actual position under the following conditions.

The following occurrences are not malfunctions :	
<ul style="list-style-type: none">• When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction• Within city streets, the current position may be displayed on the opposite side or on an off-road position• When changing the zoom level from maximum to a different level, the current position may become displayed on a different road• If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading• When driving on a spiral-shaped road• When driving in mountain regions with sharp turns or sudden brakes• When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations• When driving in heavy traffic with frequent starts and stops	<ul style="list-style-type: none">• When driving under slippery conditions, such as heavy sand, snow, etc.• When driving on spiral-shaped roads• When the tires have recently been replaced (Especially upon use of spare or studless tires).• When using tires of improper size• When the tire pressure for the 4 tires are different• When the replacement tire is worn or used (Especially studless tires having passed a second season).• When driving near high-rise buildings• When a roof carrier has been installed• When a long distance route is calculated while driving on an expressway In such cases, continued driving will automatically enable the system to conduct map matching or use updated GPS information to provide the current position (In such cases, up to several minutes may be required)

Correct route guidance may not occur due to search conditions or driving position.

The following occurrences are not malfunctions :	
<ul style="list-style-type: none">• Guidance to go straight may be given while driving on a straight road• Guidance may not be given even when having turned at an intersection• There are certain intersections in which guidance may not occur• A route guidance signaling for a u-turn may occur in some No u-turn intersections	<ul style="list-style-type: none">• Route guidance signaling entrance into a No-entry zone may occur (No-entry zone, road under construction, etc.)• Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow• Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.)

These situations may occur after conducting route calculation.

The following occurrences are not malfunctions :	
<ul style="list-style-type: none">• Guidance may be given to a position differing from the current position when turning at an intersection• When driving in high speeds, route recalculation may take a longer period of time• Route guidance signaling for a u-turn may occur in some No u-turn intersections	<ul style="list-style-type: none">• Route guidance signaling entrance into No-entry zone may occur. (No-entry zone, road under construction, etc.)• Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow• Faulty voice guidance may be given if the vehicle breaks away from the designated route (e.g. If a turn is made at an intersection while the navigation provided guidance to go straight.)

All Map Database cannot be copied without permission. This is protected by U.S. copyright laws. All rights not expressly granted are reserved. You may not otherwise reproduce, modify, and distribute the content without HYUNDAI MNSOFT ("HMNS"), Inc's prior written consent.

Copyright for Canada

This data includes information taken with permission from Canadian authorities, including © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®, © The Department of Natural Resources Canada. All rights reserved."

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and HMNS and its licensors (including their licensors and suppliers) on the other hand.

© 20XX NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®, © Department of Natural Resources Canada. NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 20XX. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

The Data for Mexico includes certain data from Instituto Nacional de Estadística y Geografía.

Terms and Conditions

Personal Use Only. You agree to use this Data together for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions. Except where you have been specifically licensed to do so, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you “as is,” and you agree to use it at your own risk. HMNS and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: HMNS AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: HMNS AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF HMNS OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. HMNS shall not export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit NT from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement. These terms and conditions constitute the entire agreement between HMNS (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of New York, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of New York for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a “commercial item” as that term is defined at 48 C.F.R. (“FAR”) 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following “Notice of Use,” and shall be treated in accordance with such Notice:

Notice of Use

Contractor (Manufacturer/ Supplier) Name: NAVTEQ

Contractor (Manufacturer/Supplier) Address: c/o Nokia 425 West Randolph Street, Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this Data was provided.

© 20XX NAVTEQ – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

Additional Provisions

The Data may include or reflect data of licensors, including Her Majesty the Queen in the Right of Canada (“Her Majesty”), Canada Post Corporation (“Canada Post”) and the Department of Natural Resources Canada (“NRCan”). Such data is licensed on an “as is” basis. The licensors, including Her Majesty, Canada Post and NRCan, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, including but not limited to, effectiveness, completeness, accuracy or fitness for a particular purpose.

The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the Data. The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the Data.

End User shall indemnify and save harmless the licensors, including Her Majesty, Canada Post and NRCan, and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the Data.

Copyright for Brand Icon

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

Copyright for Junction View

Junction View Data provided by ZENRIN USA, INC. Copyright(C) 2011, All rights Reserved.

part.6 Voice Recognition

What is Voice Recognition?

Precautions Required for Successful Voice Recognition

Starting/Ending and Setting Voice Recognition

Voice Recognition Screen Overview

Voice Commands

06

Voice Recognition



What is Voice Recognition?

Voice recognition technology runs the system as ordered by recognizing your voice command to ensure the safe operation of multimedia while you are driving the car.

Regretfully, not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.


There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
3. Voice recognition automatically ends if:
 - 1) A call is incoming or outgoing
 - 2) A media (USB or iPod, etc.) is connected or disconnected
 - 3) The front or rear view camera is operated (optional)
 - 4) The car engine starts or stops
 - 5) A system key, such as  or  is selected
 - 6) An emergency occurs, for example re-searching for the route after the navigation route has been lost
4. The microphone that recognizes your voice is located over the head part in the driver's seat. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
5. Speaking naturally and clearly will ensure better recognition of your voice commands.
6. In the following cases voice recognition will be affected by ambient noise.
 - 1) The sound of the wind if any window or the sun roof is open.
 - 2) A strong wind blowing from the air vents. Set climate control to blow softer than level 3.
 - 3) Vibrations from passing through a tunnel.
 - 4) Vibrations from driving on an uneven road.
 - 5) Storms and heavy rain.


Starting/Ending and Setting Voice Recognition

 
Starting Voice Recognition

Press the  key briefly (less than 0.8 seconds) on the steering wheel remote control to activate voice recognition.



Ending Voice Recognition

1. Select "Exit" to the left of the bottom to end voice recognition.
2. Press and hold (over 0.8 seconds) the  on the steering wheel remote control to end voice recognition.

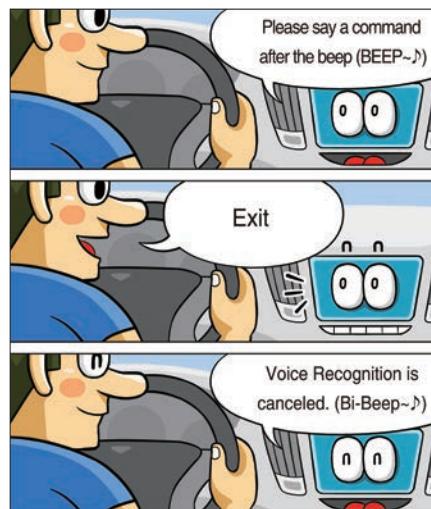

Extending the Standby Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the voice recognition icon less (shorter than 0.8 seconds), then the beep will sound again and standby mode will restart.

 
When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command.



Skipping Prompt Messages

When you hear the prompt message, lightly touch the voice recognition icon on the steering wheel remote control to skip the message and go directly to standby mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

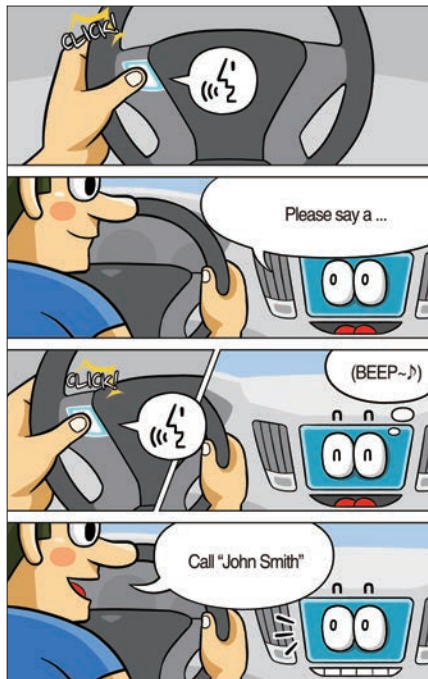

Adjusting Voice Recognition Volume

During voice recognition, turn the volume knob to the left/right to adjust the message volume.



Voice Recognition Screen Overview


Start Screen



Name	Description
1 Most frequently used commands	Displays the six most frequently used commands.
2 Not available command	Displays commands that are not available due to a failure in meeting the conditions for using them and thus need additional settings. The conditions required for using them will be described briefly under each command.


Name	Description
3 Voice recognition status icons	Standby Voice guidance Voice command process
4 User's speaking volume being recognized	Displays the voice command volume in real time.
5 Recognized results	Displays the voice recognition result.
6 Help button	Displays all available help commands in a tree format.
7 Exit button	Ends the voice recognition.

 Help Screen

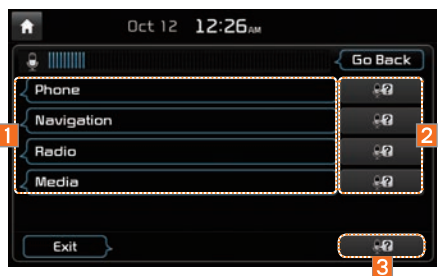

Name	Description
1 Command list	<ul style="list-style-type: none">Shows the available commands.Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

 Instructions for Using Voice Recognition

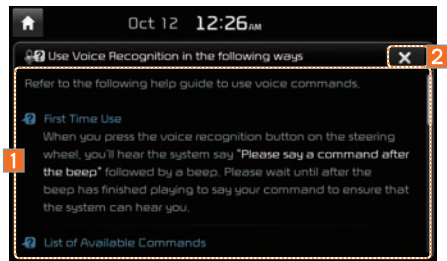

Name	Description
1 Detail instruction	This section describes how to use voice recognition in detail.
2 Close button	Closes the screen and restarts voice recognition.

i Information

- In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you can not view it while driving for safety precautions.

Voice Commands

Types of Commands

Voice recognition commands are classified as "Global Commands" and "Local Commands."

1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
2. Local Commands (○): Commands that can be used when a multimedia, navigation, or Bluetooth call is running, or displayed on the screen, after activating voice recognition.

Phone Commands

* Check the following before using call commands :

1. Voice commands related to phone calls can be used after connecting the Bluetooth device.
2. To call a person, for example "Call <John Smith>" whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see "Part 3. Using Bluetooth > Chapter 3. Bluetooth Phone > 3.6 Contacts".
3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time takes to convert voice data may vary depending on the number of Contacts downloaded.

Command		Operation
●	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
●	Call <Name>	You can directly call a person by <Name> in the downloaded Contacts.
●	Call <Name> on Mobile	You can call a person directly <Name> to the number that is saved as "Mobile" in the downloaded Contacts. e.g.) Call "John Smith" on Mobile
●	Call <Name> in Office	You can call a person directly <Name> to the number that is saved as "Office" in the downloaded Contacts. e.g.) Call "John Smith" in Office
●	Call <Name> at Home	You can call a person directly <Name> to the number that is saved as "Home" in the downloaded Contacts. e.g.) Call "John Smith" at Home
●	Call <Name> on Other	You can call a person directly <Name> to the number that is saved as other than "Mobile, Home, or Office" in the downloaded Contacts. e.g.) Call "John Smith" on Other
●	Dial Number	Displays a screen where you can say a phone number to dial.
●	Dial <Phone #>	You can directly say the number to call. e.g.) Dial 111 555 1234
●	Redial	Directly calls at the number that you last dialed.
●	Call History	Displays your Call History, where you can say the list number to make a call.

Navigation Commands

* Check the following before you use navigation commands :

1. Search for and find addresses located in the state or province your car is currently in.

If you want to search in another state, say the name of state/province and then look it up.

Find Address is classified by states/provinces to provide you with faster service.

2. Some commands such as "Cancel Route" are available only when the destination is fixed.

Command		Operation
●	Find Address in <State>	<ul style="list-style-type: none"> • Finds the address in <State> and sets it as the destination. e.g.) Find Address in California • To find an address, you should say "House Number → Street → City" (in order, excluding the state). e.g.) 300 (Three Zero Zero) Main Street, Almond
●	Find Address	Finds the address and sets it as the destination.
●	Find the Nearest POI	Find the nearest points of interest from your current location. After this command, you can find the name of a location step-by-step.
●	Find the Nearest <Category>	Immediately finds <Category> nearest to your current location. For details of <Category>, see "5-8. List of Nearest Locations". e.g.) Find the Nearest "Bank"

Command		Operation
●	POIs Near Destination	Finds POIs near the destination. After this command, you can find the name of a location step-by-step.
●	<Category> Near Destination	Finds <Category> near the destination. For details of <Category>, see Owner's Manual, "5-8. List of Nearest Locations" e.g.) "Bank" Near Destination
●	Map	Moves to the current position on the navigation map
●	Previous Points	Displays a list combining Previous Destinations, Previous Searches, and Previous Starting Points all together. You can then set a destination by saying the list number.
●	Previous Destinations	Displays a list of recent destinations that you can return to by saying the number in the list.
●	Previous Searches	Displays a list of recent searches, where you can set a destination by saying the number in the list.
●	Previous Starting Points	Displays a list of recent starting points that you can return to by saying the number in the list.
●	Traffic Information	Moves to the Traffic Information menu screen.
●	Go Home	Set the destination to your home. Your home must first be set in the navigation system.
●	Go to Office	Set the destination to your office/work. Your office/work must first be set in the navigation system.

Command		Operation
●	Turn Guidance On	Turns on the voice guidance system.
●	Turn Guidance Off	Turns off the voice guidance system.
●	Zoom All the Way Out	Zooms in on the navigation map to the fullest.
●	Zoom All the Way In	Zooms out from the navigation map to the fullest.
●	Cancel Route	Cancels the route to the fixed destination and exits guidance.
●	Destination Information	Tells you the remaining distance and time to your destination.
●	Route Options	Restarts the route to your destination. You can then select either “Faster Time” or “Shorter Distance”.
●	Find Faster Time Route	Starts a new route to your destination that will take the least amount of time.
●	Find Shorter Distance Route	Starts a new route to your destination that will use the shortest distance.
●	Emergency Services	Displays a list of nearest Police Station, Hospital, Dealership, or Road Assistance. You can then set a destination by saying the list number.
●	Police Station	Displays a list of the nearest police stations. You can then set a destination by saying the list number.

Command		Operation
●	Hospital	Displays a list of the nearest hospitals. You can then set a destination by saying the list number.
●	Dealership	Displays a list of the nearest car dealerships. You can then set a destination by saying the list number.
●	Road Assistance	Displays a list of the nearest road assistance locations. You can then set a destination by saying the list number.
●	Show Route	Displays a map overview of the entire route to your destination.

Radio Commands

Command		Operation
●	Radio	Plays the most recent radio channels from FM, AM, and SiriusXM™.
●	FM	Plays FM radio.
●	FM <87.5~107.9>	Tunes to FM <Frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five
●	SiriusXM™	Plays SiriusXM™ radio.
●	SiriusXM™ Channel <0~999>	Tunes to SiriusXM™ Channel <Channel Number> according to what you say. e.g.) SiriusXM™ Channel 23: SiriusXM™ Channel twenty three
●	AM	Plays AM radio.
●	AM <530~1710>	Tunes to AM <Frequency> according to what you say. e.g.) AM 530: AM five thirty
○	Preset <1~18>	Tunes to your preset stations (1 to 18).
○	Channel <0~999>	In SiriusXM™ Radio mode, turns on the <Channel Number> that you say.

Media Commands

* Check the followings before you use media commands.

1. If no media is connected or if no playable files exist at the time when you use these commands, a voice message will tell you that this is not available at present.
2. If you say the name of the media that is currently playing again, then that media will continue playing.
e.g.) Saying “USB” while USB content is playing.

Command		Operation
●	Media	Continues the last media you played. This command includes images.
●	Music	Continues the last media you played. This command does not include images.
●	iPod	Plays the iPod currently connected. This will work the same when an iPhone is connected. If a USB is connected, then it will be played instead of the iPod.
●	USB	Plays the music on the USB currently connected. If an iPod is connected, then the iPod will be played instead of the USB.
●	Bluetooth Audio	Plays the music on the Bluetooth phone currently connected. This may not be supported depending on the Bluetooth connection status.
●	AUX	Plays external devices that are currently connected.
●	My Music	Plays My Music files stored in the system.
●	Pandora Radio	Plays Pandora Radio that is currently connected. Pandora Radio operates according to the iPod currently connected.

1. USB Music / iPod / My Music Command

Command		Operation
<input type="radio"/>	Play	Plays a selected file. Maintains the current settings during playback.
<input type="radio"/>	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
<input type="radio"/>	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.
<input type="radio"/>	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
<input type="radio"/>	Repeat	Plays the current track or file repeatedly. Maintains the current settings during repeat playback.
<input type="radio"/>	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

2. Bluetooth Audio / AUX Command

- Bluetooth Audio supports different functions according to connected devices, therefore some commands are unavailable, including Play, Stop, Previous Song, and Next Song.
- For external devices (AUX) and some commands are unavailable, including Play, Stop, Previous, and Next.

Other Commands List

(Commands used in List / Help)

Command		Operation
●	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
○	Line 1~5 (One~Five)	When you cannot select a certain name, such as in Call History, you can select it using numbers. Simple numbers can be recognized, such as "One" or "Two."
○	Yes / No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
○	Manual Input	When Dial or POI Name search results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.

“Find the Nearest <Category>” List

Navigation location names can be changed after an update.

1. Restaurants

Restaurants	SUBWAY	Ponderosa	Mexican
Fast Food	Taco John's	Publix	Cantina Laredo
Arby's	Wendy's	Seasons 52	Chevys
Boston Market	White Castle	Sheetz	El Chico
BURGER KING	American	Silver Fox	Japanese
Carl's Jr	Applebee's	Texas Roadhouse	Chinese
Church's Chicken	Bahama Breeze	TGI Friday's	PF Chang's China Bistro
Dairy Queen	Boston's Restaurant & Sports Bar	The Capital Grille	Korean
Firehouse Subs	Cheeseburger in Paradise	French	Vegetarian Food
Fleming's	Chili's Grill & Bar	Italian	Seafood
Hardee's	Cool River	Bonefish Grill	Red Lobster
In-N-Out Burger	Denny's	Carrabba's Italian Grill	Latin American
Jack in the Box	Frisch's Big Boy	Chuck E Cheese's	Asian
Jimmy John's	Good Eats	Domino's	African
KFC	Ill Forks	Olive Garden	Coffee Shop
McAlister's Deli	Lee Roy Selmon's	Papa John's	Starbucks
Panera Bread	Lone Star Steakhouse & Saloon	Papa Murphy's	Dunkin' Donuts
Popeyes	Longhorn Steakhouse	Pizza 73	
Quiznos Sub	Luckys Cafe	Pizza Hut	
Schlotzsky's	Outback Steakhouse	pizza pizza	
SONIC		Continental	

2. Automotive

Automotive	
KIA Dealership	Mobil
Hyundai Dealership	Murphy Express
Gas Stations	Murphy USA
76	Petro Stopping Centers
ampm	PETRO-CANADA
ARCO	Phillips 66
BP	Pioneer
Canadian Tire	QuikTrip
Chevron	Rutter's
CITGO	Sheetz
Conoco	Shell
Esso	Sinclair
Exxon	Sunoco
Fleetfuels	Sunoco Canada
GetGo	TEXACO
Giant Gasoline	TravelCenters of America
GTO	Ultramar
Gulf	Valero
Husky	Wawa
Ingles Gas Express	Parking
Martin's Gasoline	Auto Services
Meijer	America's Tire
	BOSCH Car Service

3. Travel

Travel
Airports
Hotels
Americas Best Value Inn
AmericInn
Andaz
Ascend Collection
Baymont Inn & Suites
Best Western
Cambria Suites
Canadas Best Value Inn
Candlewood Suites
Clarion Hotel
Comfort INN
Comfort Suites
CONRAD
Country Inn & Suites by Carlson
COURTYARD by Marriott
Crowne Plaza
Days Inn
DELTA
Doubletree

Travel
Econo Lodge
Embassy Suites
Grand Residences by Marriott
Hampton Inn
Hampton Inn & Suites
Hawthorn Suites
Hilton
Hilton Garden Inn
Hilton Grand Vacations
Holiday Inn
Holiday Inn Express
Homewood Suites
Hotel Indigo
Howard Johnson
Hyatt Place
Hyatt
Hyatt Summerfield Suites
Intercontinental
JW Marriott
LA QUINTA INN
Lexington
Mainstay Suites

Marriott
Marriott VACATION CLUB
Microtel Inns & Suites
Motel 6
NOVOTEL
Omni Hotels
Park Inn
Park Plaza
QUALITY INN
Radisson
Radisson SAS
RAMADA
Red Roof Inn
Regent Hotels & Resorts
Renaissance
Residence Inn
Ritz-Carlton Club
Rodeway Inn
Sheraton
Sleep Inn
SOFITEL
Staybridge Suites
Studio 6

Suburban Extended Stay
Super 8
Thriftlodge Canada
Travelodge
Travelodge Canada
VAN DER VALK
WALDORF ASTORIA COLLECTION
Wingate by Wyndham
Wyndham
Tourist Information
Tourist Attractions
Travel Agents
City Centers
Rental Car Agency
Alamo
AVIS
Budget
Dollar Rent A Car
National
Thrifty
Campground
Ferry Terminals

Bus Stations
Local Transit
Train Stations

4. Shopping

Shopping	
Department Stores	Sunoco Canada
Canadian Tire	TravelCenters of America
Kmart	Wawa
Kohl's	Shopping Centers
Nordstrom	Grocery Stores
Sears	Giant Eagle
Sears Hometown Store	Giant Food Stores
T.J. Maxx	IGA
Walmart	Ingles Markets
Convenience Stores	Kmart
7-Eleven	Martin's Food Markets
ampm	Meijer
BP	Publix
Circle K	Sav-Mor Foods
Fleetfuels	Save-A-Lot
GetGo	SuperValu
GTO	Music Stores
Murphy Express	Bookstores
Murphy USA	Barnes & Noble
Petro Stopping Centers	Electronics
QuikTrip	Best Buy
Rutter's	Future Shop
	Staples

OfficeMax
Gifts
Sporting Goods
Dick's Sporting Goods
Sports Authority
Home Specialty Stores
ABC Fine Wine & Spirits
Costco
Home Depot
Clothing
Mark's Work Wearhouse
Shoe Stores
Pharmacies
Giant Drugstore
Giant Eagle
Ingles Pharmacy
Kmart Pharmacy
Martin's Drugstore
Meijer Pharmacy
Publix
Rite Aid
Shoppers Drug Mart
Walgreens

5 Recreation

Recreation
Amusement Parks
Museums
Cinema
Golf Course
Sports Complex
Sports Activities
Winery
Video & Game Rental
Ski Resort
Recreation Area
Other Recreation

6. Financial Services

Financial Services
Banks
Chase
RBC Bank
Wells Fargo
ATMs
Chase
RBC Bank
Wells Fargo
Check Cashing Services
Money Transfer
Candlewood Suites
Clarion Hotel
Comfort INN
Comfort Suites
CONRAD
Country Inn & Suites by Carlson
COURTYARD by Marriott
Crowne Plaza

7. Community

Community
Police Stations
Post Offices
Libraries
Schools
Fire Department
Convention Centers
City Hall
Civic Centers
Court House
Government Offices
Waste & Sanitary
Utilities
Business Facility

8. Services

Services
Hospitals
Medical Services
Physician
Tax Services
Attorney
Funeral Home
Hair & Beauty
Cleaning & Laundry
Social Services
Communication
Dentist
Photography
Tailor & Alteration
Mover

MEMO

07

part.7 Info

Start up

Pandora Radio Mode

Quick Guide

SiriusXM™ Data

Info

Start Up

 
Press the **INFO** key on head unit to enter the information screen. The screen is composed of : “Pandora” to listen to Pandora Radio by connecting a smart phone; “Quick Guide” to provide information about how to controls and major functions; “Climate” to show air-conditioning and heating information for the car; “SiriusXM Data” to show weather, traffic, stock, gas station, sports, and movie information provided by SiriusXM™ Travel Link.

Pandora Radio Mode


Pandora Radio Mode

Press the “Pandora” icon after selecting All Menus or the Info hard-key to enter Pandora Radio mode.


Pandora Radio Mode Screen Controls

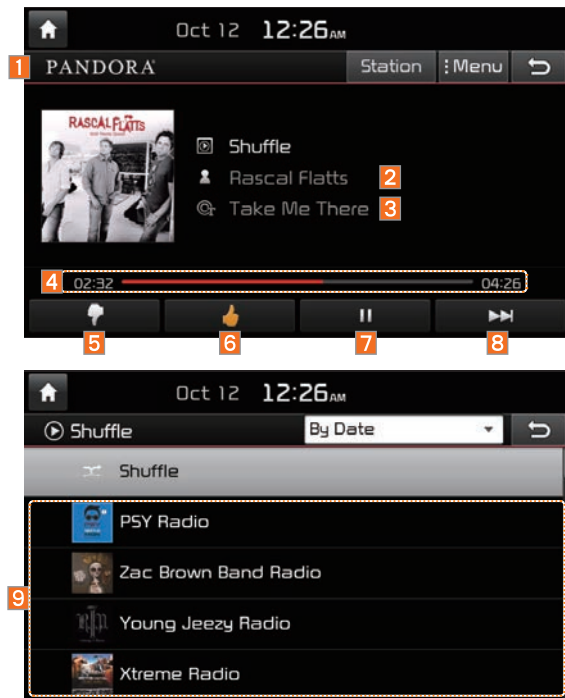

Name	Description
1 Mode	Displays currently operating mode.
2 Station Info	Shows the station name currently playing.
3 Track Info	Shows the artist/title information currently playing.
4 Play Time	Displays the current play time.
5 Thumb up	If you like the genre of the music currently playing, press this button to send a "Thumb Up" signal to Pandora so that more similar music will play.
6 Thumb Down	If you don't like the music currently playing, press this button to move to the next music and to minimize the number of playbacks of similar genre music. i You can move to next song up to specific times which pandora allows
7 Play/Pause	Plays/pauses the current song
8 SKIP	Moves to the next track i You can move to next song up to specific times which pandora allows
9 Station List	Moves to the station list screen.

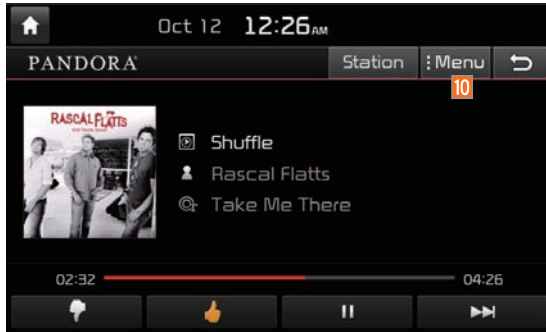 

Name	Description
10 Menus	<ul style="list-style-type: none"> • Bookmark Track Adds the music currently playing to the bookmarks list. • Bookmark Artist Adds the artist of the music currently playing to the bookmarks list. <p>i You can view your bookmarked artists and songs from your Pandora profile online. Go to pandora.com, then click on the “Your Profile” button above the player. That will bring up a page with your stations, bookmarked artists, and bookmarked songs.</p>
11 SEEK/ TRACK	Press briefly to play the next song.
12 TUNE	Rotate the TUNE knob to search for a station. Press the TUNE knob to play the station when you find the name that you want.

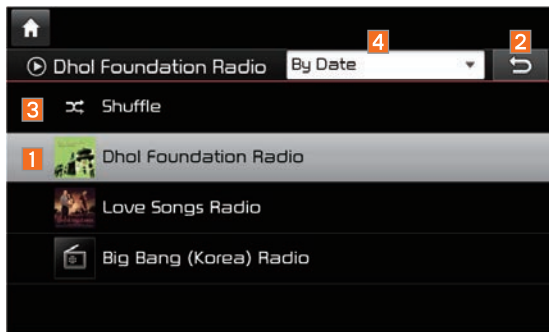 

Name	Description
1 Current Station	Shows the name of the station currently displayed.
2 Previous	Switches to the play mode screen.
3 Shuffle	Shuffling your stations provides a more diverse mix of music by randomly playing songs from the stations in your list.
4 Search Menu	Sorts stations by the items in the menu. <ul style="list-style-type: none"> • A-Z: Sorts stations in alphabetical order. • By Date: Sorts stations in the order they were generated.
5 SEEK/ TRACK	Press briefly to play the next song.
6 TUNE	Rotate the TUNE knob to move to the previous/next list. Press the TUNE knob to play a selected file.

Quick Guide

Quick Guide informs you of the basic controls of AVN and how to enter the main modes.

Use it to learn general controls when using AVN for the first time.

Quick Guide screens might be different from those of AVN.

Touch Control


Select **All Menus** or **My Menu** from the Home screen, followed by ► **Quick Guide** and then ► **Touch Control** .



Name	Description
Press and Hold	Describes the function to fast-forward media that is playing.
Drag	Describes how to move the slide ball while playing media.
Swipe	Describes how to move to the next/previous screen.
Double-Tap	Describes how to maximize/minimize the size of photos.

Home

 Select **All Menus** or **My Menu** from the Home screen, followed by ► **Quick Guide** and then ► **Home** .

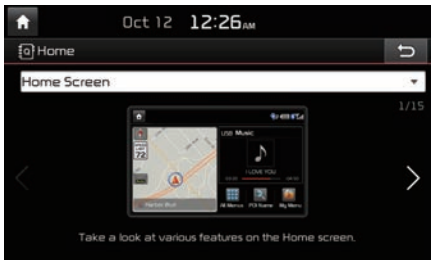

Name	Description
Home Screen	Describes various functions for the Home screen.
Add/Remove My Menu Items	Describes how to edit the Menu screen with frequently-used features.

Bluetooth

Select **All Menus** or **My Menu** from the Home screen, followed by ► **Quick Guide** and then ► **Bluetooth** .




Name	Description
What is Bluetooth Handsfree?	Describes Bluetooth hands-free.
What is Bluetooth Audio?	Describes Bluetooth Audio streaming.
Connect	Describes how to connect the vehicle and a smart-phone with Bluetooth.
Download Contacts	Describes how to download contacts from a smart-phone.

Name	Description
Use Bluetooth Phone	Describes how to use the hands-free call function with Bluetooth.
Use Audio Streaming	Describes how to configure Bluetooth for audio streaming.
Bluetooth Auto-Connect	Describes how to automatically connect Bluetooth devices

Voice Recognition

 Select **All Menus** or **My Menu** from the Home screen, followed by ► **Quick Guide** and then ► **Voice Recognition** .

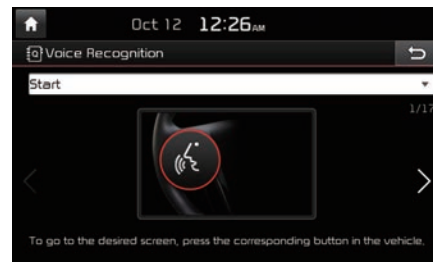

Name	Description
Start	Describes how to run various functions by with voice commands.
Verify Commands	Describes how to change frequently-used commands with the help function.
Press Speech Balloon	Describes speech balloon functions.
Select Items	Describes how to select items with many lists.

SiriusXM™ Data

About SiriusXM™ Data Service

 
The SiriusXM™ Data Service is a paid membership Satellite radio service which provides users

with traffic, stock, sports, and weather information.

However, weather information is not supported for vehicles purchased in Canada.

Accessing SiriusXM™ Data

Press the “SiriusXM Data” icon after selecting **All Menus** or the **INFO** hard-key to enter the SiriusXM™ Data mode.

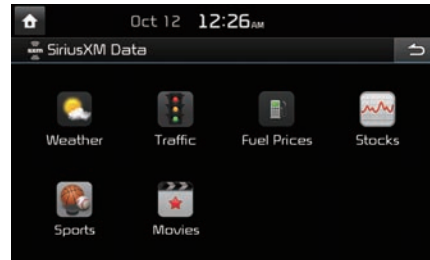

SiriusXM™ Weather Announcement

At the “SiriusXM Data” screen, press the “Weather” icon to enter the Weather Announcement mode.

 
Weather Forexcast

This service provides current weather information and weather forecasts for the next five days in your region. To change the region, press the Other City button and select the desired region.



Warnings and Advisories

This service provides weather warnings and advisories, such as tornado, storm, Floodflood, etc. as symbols on the Navigation map.

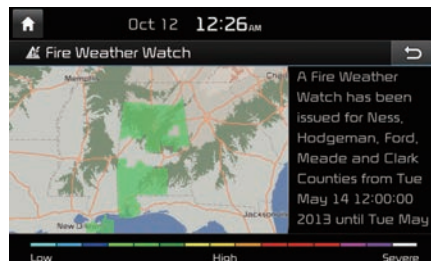


SiriusXM™ Traffic Information

At the “SiriusXM Data” screen, press the “Traffic” icon to enter the Traffic Announcement mode.

SiriusXM™ Fuel Price Information

 
At the “SiriusXM Data” screen, press the “Fuel Prices” icon to enter the Fuel Prices Information mode.

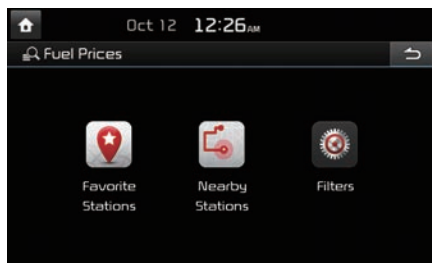


Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the “Nearby Stations” menu.

 It shows station locations, starting from the nearest one, and select “Nearest” menu on the top right side to further sort them by price or brand name.

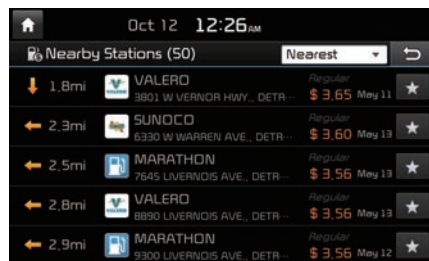


 Select the ★ button to the right of the list to register key locations as a Favorite Station so that you can go there again with the “Favorite Stations” menu. Select the list to move to navigation destination select screen to receive guidance.

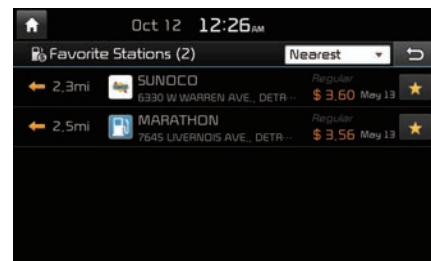

My Fuel Type Settings

 With the “Filters” menu, you can select fuel types and favorite brands. When searching for Nearby Stations, the results will reflect selected fuel types and brand information.

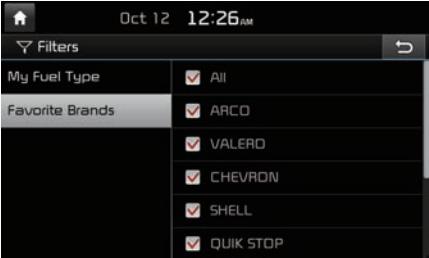

SiriusXM™ Stock Information

 
In the “SiriusXM Data” screen, press the “Stocks” icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.

For symbols which you are interested in, press the icon to save the symbol as a part of Saved symbols can be viewed from the My Favorites button on the Stock Main screen.


My Favorites


My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Press the “Add” button to move to the stock search screen.

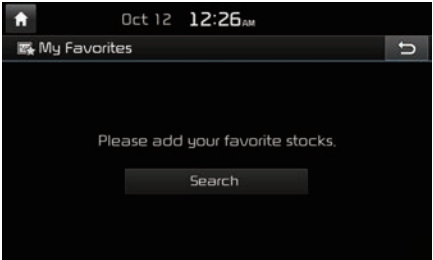


Stock Search

Use the Stock Search menu to search for specific stocks.

 Press the  button after searching for your favorite stocks to save them in “My Favorite”.

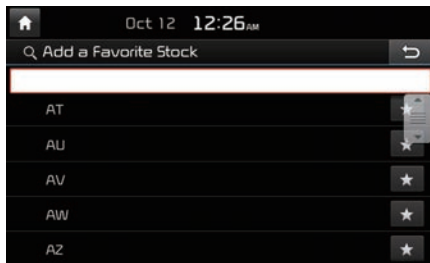

 
In the My Favorites screen, you can find the selected stock information that you registered.

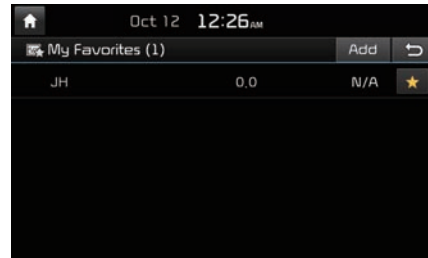

SiriusXM™ Sports Information

Press the “Sports” icon to enter the Sports mode.

 This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.


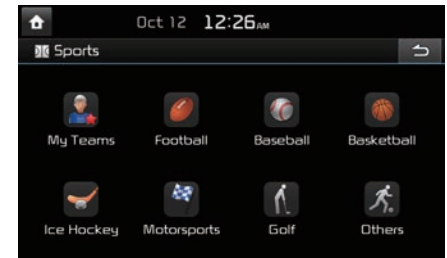


My Teams


You can save teams which you are interested in as part of My teams to easily view related scores and schedules.

Select the My Teams menu and then press the **Add** button to search for and register your favorite teams.

 
 
Search for your favorite teams and press the **★** button on the right to add it to the “My Teams” list.

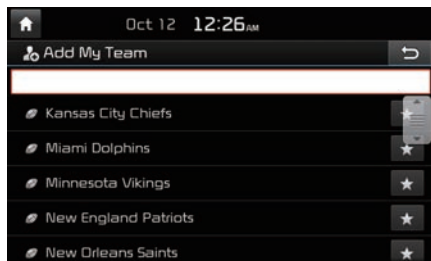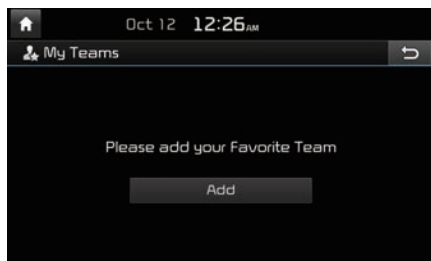

 You can always check the list of teams that you added in the “My Teams” menu. Press the **★** button on the right side of the team name to delete the team from “My Teams” or press the “Add” button to add other teams.

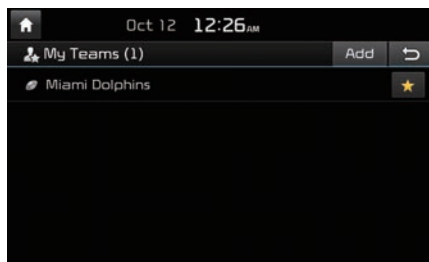

  Press the team name to check daily results and recent schedules for that team.

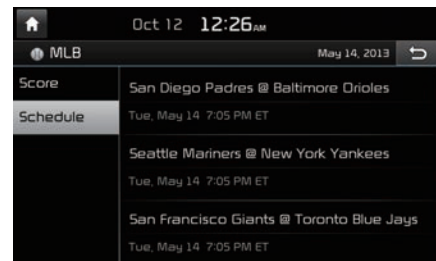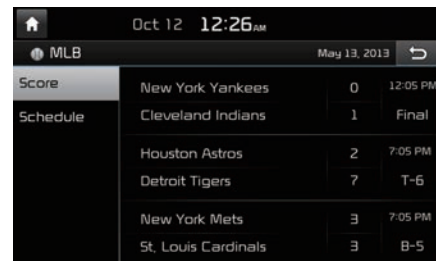




Oct 12 12:26 AM

Kingsmill Champ

Name	Score	Ranking
Cristie Kerr	-12 (0)	1
Suzann Pettersen	-12 (0)	2
Aniya Jutanugarn	-10 (66)	T3
Ilhee Lee	-10 (67)	T3
Angela Stanford	-9 (69)	T5

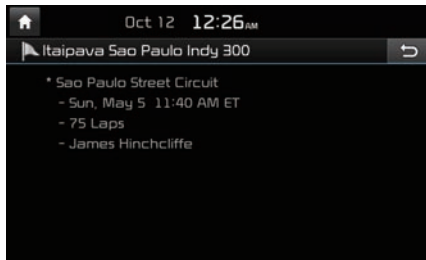 

Oct 12 12:26 AM

 
Itaipava Sao Paulo Indy 300

* Sao Paulo Street Circuit
- Sun, May 5 11:40 AM ET
- 75 Laps
- James Hinchcliffe

SiriusXM™ Movie Information

Press the “Movies” icon to enter the Movie mode.



You can check recent movies and nearby theaters, and also register your favorite theater locations.

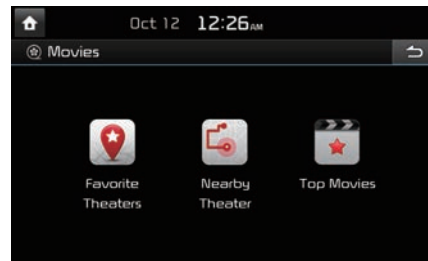




Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.

  In the “Nearby Theaters” menu, you can search for any nearby theaters.

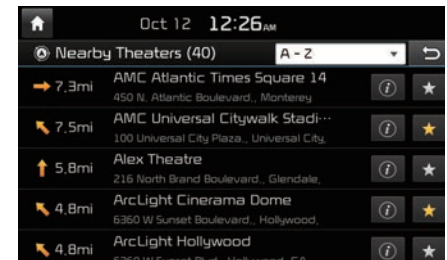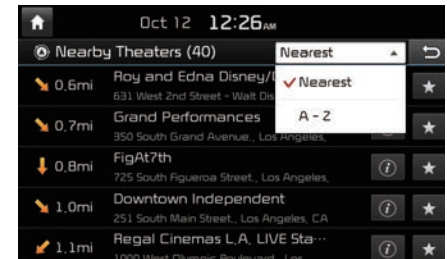
It shows theaters, starting from the nearest one, and selecting the “Nearest” menu at the top right side will sort them by name.



 
Select the  button to the right of the list to register your favorite theater so that you can always check it again using the “Favorite Theaters” menu and selecting the  button to view the current movie information for that theater.

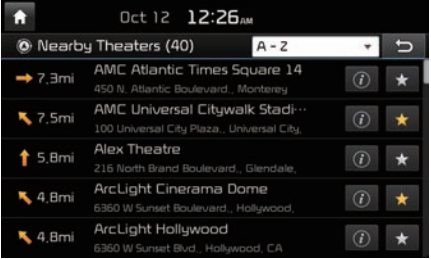

 Select from the list to move to the select navigation destination screen and receive the directions.

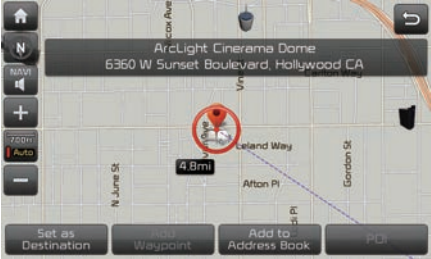

In the “Top Movies” menu, you can check for any movies that are currently popular. Press  button to the right of a movie title to view the plot summary and any other detailed information.



MEMO

08

part.8 Other Fratures

Climate Mode

Camera

Other Fratures

 
Climate Mode

Operating Climate Mode

Press the **CLIMATE** key for the climate system to see status information in the full screen display.

While multimedia or navigation is in use, the climate system information will be displayed over top when you control the temperature (TEMP) or turn on the air conditioner (A/C).

Basic Mode Screen

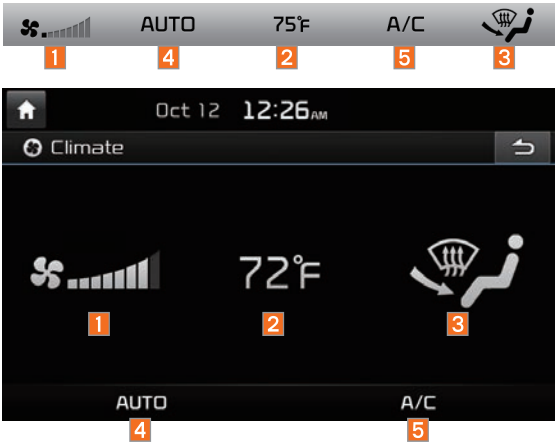

Name	Description
1 Air volume	Displays the configured air volume settings.
2 Set temperature of driver's seat	<p>Displays the configured temperature of driver's seat. Cooling and heating will continue until the temperature of the driver's seat matches the configured temperature.</p> <p>i The internal temperature can be controlled in increments of 1°F within a range of 63°F to 89°F.</p> <p>i LOW is displayed when the temperature is set to anything below 63°F, and HIGH is displayed when it is set to anything above 89°F.</p>
3 Air direction	Displays the configured air direction settings.
4 Cooling/heating control status (AUTO)	<p>It is displayed when the AUTO key is selected, and cooling/heating operates automatically according to the configured temperature settings.</p> <p>i AUTO will be off when you try do the following with AUTO on:</p> <ul style="list-style-type: none">- Control the air volume- Control the air direction- Turn on/off the air conditioner (A/C)- To turn on the moisture removal function for the windshield
5 Air conditioner control status	It is displayed when the A/C key is selected and the air conditioner starts cooling.

 
Camera

About Rear Detection Camera

- This device is connected to a rear detection camera to see behind the car for safe reversing.
- When the engine starts, shift the gear to R to activate the rear detection camera.
- Shift the gear to another position to deactivate the rear detection camera.

i Information

- While the device boots up, shift the gear to R to activate the rear detection cameras.
- A separate chipset is used for the camera screen while booting up, so it may be different after booting up.
- When booted up, blinking may occur when you switch to a UI screen.

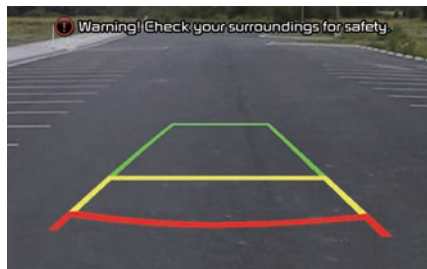

⚠ CAUTION

- A wide-angle lens is installed as the rear detection camera to get a wider view, so there may be some difference between the actual distance and the distance that appears on-screen. For safety, make sure to view the back, right, and left sides of the car for yourself.

MEMO

09

part.9 Setup

- Setup
- Sound Settings
- Display Settings
- Phone Settings
- Voice Recognition Settings
- Clock Settings
- Keyboard Settings
- Screen Saver Settings
- System Info

Setup

Setup

Setup is the screen to control system settings of the AVN.

To enter the screen, select the **Setup** key of the device or the **Setup** button in All Menus.

[Option 1]




Features	Description
1 Navigation	Provides Normal/ Screen/Guidance/ Route/Safety Setting.
2 Sound	Provides the sound control options for Position, Bass, Mid, Treble, Volume, Ratio and Advanced settings.
3 Display	Provides the Adjust/ Mode settings.
4 Phone	Provides the Bluetooth Connection/ Auto Download/ Auto Connection Priority /Phone Ringtone/Audio Streaming/System Bluetooth Information settings.



Features	Description
5 Voice Recognition	Provides the Guidance and Priority settings.
6 Clock	Provides the Time and View settings.
7 Keyboard	Provides settings to switch keyboard layouts.
8 Screen Saver	Provides the Clock/ Image/None settings.
9 System Info	Provides software and storage space information.
10 Display Off	Provides the Display Off (touch activation) function.

Sound Settings

 Adjusts the sound effects for the whole system.

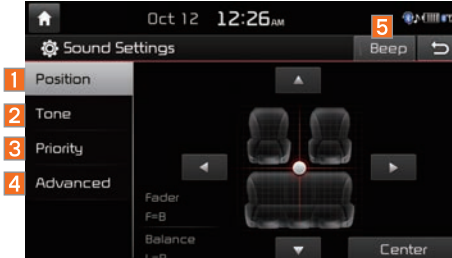


Features	Description
1 Position	Select the Up/Down/Left/Right button to control sound positioning. Press [Default Settings] to concentrate the sound on the center of vehicle.
2 Tone	Drag the slide bar to control bass/mid/treble settings. Press [Default Settings] to initialize the settings.

Features	Description
3 Priority	You can adjust the volume ratio between navigation announcements and regular audio.
4 Advanced	You can select [Speed Dependent Volume Control] to automatically control the volume by the vehicle's speed and Surround sound options. (Surround sound is optional.)
5 Beep	Select to activate a beep when pressing buttons.

Display Settings

 Controls the display brightness and image rate for the whole system.

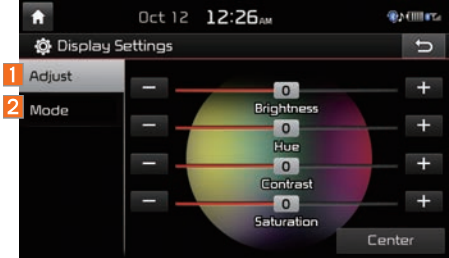

Features	Description
1 Adjust	Drag the slide bar to control the Brightness/Hue/Contrast/Saturation settings. Press [Default Settings] to initialize the settings.
2 Mode	You can select Daylight/Night/Automatic options for the display brightness according to mode changes.

Phone Settings

Changes Bluetooth phone settings.

 
Phone Settings

- Select the head unit **SETUP** key ▶ Select **Phone**.
- Home screen ▶ Select **All Menus** ▶ Select **Settings** ▶ Select **Phone**.



Bluetooth Connection Settings

- Select the **SETUP** in the head unit ▶ Select **Phone** ▶ Select **Bluetooth Connection**
- Connect a Bluetooth device ▶ Select the **PHONE** in the head unit ▶ Select **Connections**
- Connect a Bluetooth device ▶ Select **All Menus** from the Home screen ▶ Select **Bluetooth Phone** ▶ Select **Phone**.

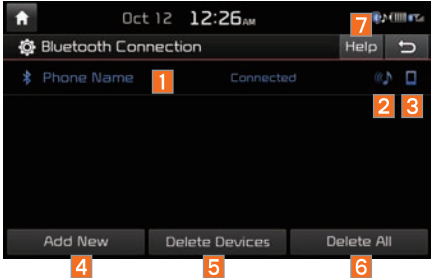

Features	Description
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected.
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth hands-free connection.
4 Add New	Register a new Bluetooth device.
5 Delete Devices	Select and delete a paired device.
6 Delete All	Delete all paired devices.
7 Help	Switches to the Bluetooth Connection Help screen.

 
i Information

- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also completely deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.
- For Default Factory Settings, the bluetooth settings are reset to factory settings
- Select the **SETUP** key ► Select **Phone** ► select **System Bluetooth Information** ► Select **Default Factory Settings**

Auto Download

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Auto Download** .

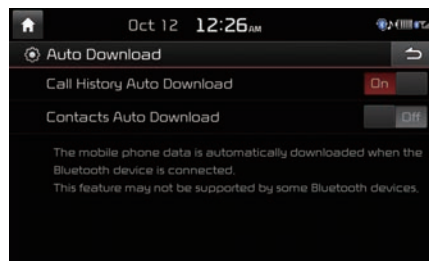

When connecting through Bluetooth, Contracts and Call History are automatically downloaded to the vehicle. This function can be disabled if you don't want to use it. Some mobile phones may not support this function.

Auto Connection Priority

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Auto Connection Priority** .



When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially. Depending on auto connection priority, connection to a device may takes time.

Phone Ringtone

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Phone Ringtone** .




Features	Description
1 Use Phone Ringtone	The configured mobile ringtone comes out through the vehicle speakers when you receive a call. When a mobile doesn't support it, the basic ringtone of the vehicle will be used.
2 Use System Ringtone	The system ringtone will be used.
3 Settings	Changes the ringtone.
4 Ringtone Type	Selects a ringtone by name.
5 Preview	Previews the available ringtones.

Audio Streaming

Select the **SETUP** key in the head unit ►

 Select **Phone** ► Select **Audio Streaming** .

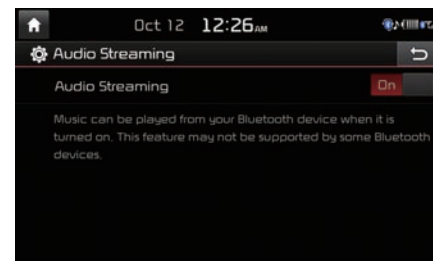

When audio streaming is set, you can play the music stored on a mobile device.

When this setting is off, Audio Streaming is not available.

Some mobile phones may not support this function.

System Bluetooth Information

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select

Bluetooth System Info .




Features	Description
1 Device Name	You can change the Bluetooth device name of the vehicle.
2 Passkey	You can change the passkey used for Bluetooth device authentication. the initial passkey is 0000.
3 Default Factory Settings	You can delete all paired devices and restore the Default Bluetooth Settings. For Default Factory Settings, all paired devices are deleted, and the system is reset to factory settings.

Information

- The device name above is an example. Check the actual information on the product.

Voice Recognition Settings

 
Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

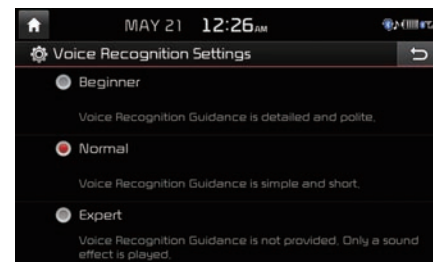

Features	Description
Guidance	Select an option from Beginner, Normal, or Expert.

Clock Settings

 
Provides the time and date settings.

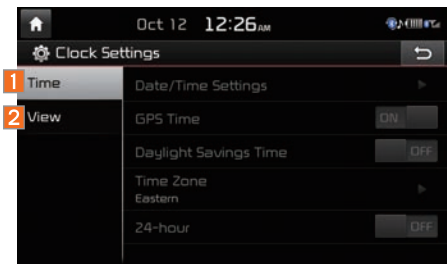

Features	Description
1 Time Settings	Provides the GPS Time, Date/Time Settings, Daylight Savings Time, and 24 Hours options.
2 View Settings	Provides options to select a digital or analog clock widget for the screen saver or home screen, and to select the Display Date settings.

Keyboard Settings

 You can configure the keyboard layout for each language.

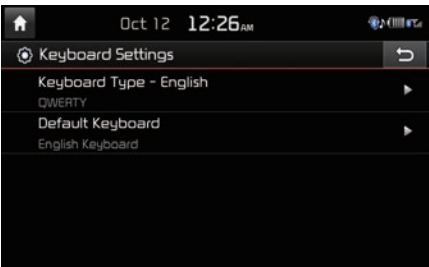

You can configure ABCD or QWERTY keyboards for the system.

i Information

- Configured keyboard layouts are applied to all input modes.

Screen Saver Settings

 
Configures a screen to be displayed when the system is powered off.



The options are Clock/Image/No Image. For **Image**, you can set the saved image from a USB file using the **Find Image** button.

System Info

At the System Info screen, software version information, updates, and storage status details are available.

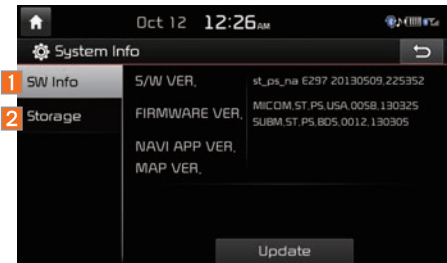

Features	Description
1 SW Info	System version information and update details are available. Select the Update button to update the system. After update is completes, the system will reboot automatically.
2 Storage Space	Displays the memory space available for media files and applications.

System Update

At the System Info screen, insert the updated memory (USB or SD card) with the latest file downloaded, and then select the **Update** button to begin updating. The system will then reboot automatically.

Information

- This product needs supplemented software updates, additional new functions, and renewed maps, which collectively may take some time to complete, depending on the amount of data.
- You can download recent maps and new software from the <http://www.kia.com> update the system using a USB or SD card.

CAUTION

- If the power is disconnected or the USB or SD card is removed during an update, the data might be damaged. Please wait until the update is complete while the engine is on.

MEMO

10

part. 10 **Appendix**

Product Specification

Has Malfunctioned

Troubleshooting

FAQ

Appendix

Product Specification

TFT-LCD

Screen Size	Navigation Device - 8 inch(176.4 x 99.36mm)
Resolution	Navigation Device - 384,000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom : ALL 89°
Internal Lighting	LED

Radio

Channels	FM : 87.5 MHz ~ 107.9 MHz(Step : 200 kHz)
	AM : 530 kHz ~ 1710 kHz(Step : 10 kHz)
Sensitivity	FM : Under 10dBu/AM : Under 40dBu
Distortion Factor	Within 2%

Common

Name	Car TFT LCD Display Navigation Unit		
Power Supply	DC 14.4V	Operating Power	DC 9V ~ DC 16V
Current Consumption	2.5A	Sleep Current	0.5mA (Head Unit Only)
Operating Temperature	-20 ~ +70℃ (-4 ~ +158℉)	Storage Temperature	-40 ~ 85℃ (-40 ~ 185℉)
Dimensions	178 X 102 X138mm (Main BOX)		
Weight	2.3Kg		

Bluetooth® Wireless Technology

Frequency Range	2402 ~ 2480 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.5), A2DP(1.2), AVRCP(1.4), PBAP(1.0)		
Output	0.125mW		
Number of Channels	79 channels		

CAUTION

- The producer and installer cannot provide services related to life safety as the concerned radio equipment is liable to radio interference.

Before Thinking the Product Has Malfunctioned

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your KIA dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	<ul style="list-style-type: none"> • Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	<ul style="list-style-type: none"> • Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	<ul style="list-style-type: none"> • Has the volume been set to a low level? • Has the volume been muted?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none"> • The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction • If the screen is very dark, contact your nearest KIA dealer for assistance
Sound is working from only one speaker	<ul style="list-style-type: none"> • Are the positions of Fader or Balance sound controls adjusted to only one side?

Problem	Possible Cause
Sound does not work in AUX mode	<ul style="list-style-type: none"> • Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	<ul style="list-style-type: none"> • Is the external device connected with a standard connector cable?
Upon turning power on, the most recent mode screen is not displayed	<p>Within modes that play files by reading external sources, such as discs, USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load</p> <ul style="list-style-type: none"> • If there is no disc or the corresponding device is not connected, the mode operated prior to the most recent mode will operate • If the previous mode still cannot be properly played, the mode operated prior to that will operate

Troubleshooting

Problem	Possible Cause	Countermeasure
The power does not turn on	The fuse is disconnected	<ul style="list-style-type: none"> • Replace with a suitable fuse • If the fuse is disconnected again, please contact your point of purchase or service center
	Device is not properly connected	<ul style="list-style-type: none"> • Check to see that the device has been properly connected
The system does not play	The vehicle battery is low	<ul style="list-style-type: none"> • Charge the battery If the problem persists, contact your point of purchase or service center

Problem	Possible Cause	Countermeasure
The image color/tone quality is low	<ul style="list-style-type: none"> • The brightness, saturation, hue, and contrast levels are not set properly 	<ul style="list-style-type: none"> • Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup
Sound does not work	<ul style="list-style-type: none"> • The volume level is set to the lowest level • The connection is not proper • The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode 	<ul style="list-style-type: none"> • Adjust the volume level • Check to see that the device has been properly connected • The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode
The sound or image quality is low	<ul style="list-style-type: none"> • Vibration is occurring from where the conversion switch has been installed • Image color/tone quality is low 	<ul style="list-style-type: none"> • The sound may be short-circuited and the image distorted if the device vibrates • The device will return to normal once vibrations stop

Problem	Possible Cause	Countermeasure
The USB does not work	<ul style="list-style-type: none"> • USB memory is damaged • USB memory has been contaminated • A separately purchased USB HUB is being used • A USB extension cable is being used • A USB which is not a Metal Cover Type USB Memory is being used • An HDD type, CF, SD Memory is being used • There are no music files which can be played 	<ul style="list-style-type: none"> • Please use after formatting the USB into FAT 12/16/32 format • Remove any foreign substances on the contact surface of the USB memory and multimedia terminal • Directly connect the USB memory with the multimedia terminal on the vehicle • Directly connect the USB memory with the multimedia terminal on the vehicle • Use standard USB Memory • Use standard USB Memory • Only MP3, WMA file formats are supported. Please use only the supported music file formats

The iPod is not recognized even though it has been connected	<ul style="list-style-type: none"> • There are no titles which can be played • The iPod firmware version has not been properly updated • The iPod device does not recognize downloads 	<ul style="list-style-type: none"> • Use iTunes to download and save MP3 files into the iPod • Use iTunes to update the firmware version and reconnect the iPod with the device • Reset the iPod and reconnect with the device
--	--	---

i Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the **RESET** key to reset the system.
- Press and hold the **RESET** key (over 1 seconds). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. If your phone is a Bluetooth® phone, then check to see whether the Bluetooth® setting within your phone has been set to 'Hidden'. If the device is set to hidden, please un-hide the device (set to unhidden state).

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?



A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with


Settings ► **Phone** ► **Bluetooth System Info** ► **Passkey** menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, press the **Accept** button on the screen or the  key on the steering remote controller. To reject the call, press the **Reject** button on the screen or press the  key on the steering remote controller.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (over 0.8 seconds) the  key on the steering remote controller or press the **Private** button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth*[®] Wireless Technology/ Head Unit Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as drink cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Index

A

About Bluetooth® Wireless Technology/ HeadUnitUseEnvironment	10-8
About HD Radio™ Technology	2-4
About iPod	2-18
About Making/Answering Phone Calls	10-8
About Pairing Mobile Phones	10-7
About Rear Detection Camera	8-3
About USB	2-11
About Using AV	2-1
About Using UVO eServices	4-1
Accept/Reject Call	3-7
Accessing FM/AM Mode	2-2
Accessing SiriusXM™ Data	7-8
Address	5-14
Adjusting Voice Recognition Volume ...	6-5
Appendix	10-1
Audio Streaming	9-6
Auto Connection Priority	9-5
Auto Download	9-5
AUX	2-25
Avoid Street	5-29

B

Basic Features	5-2
Basic Mode Screen(HDRadio™ reception ON)	2-5
Basic Mode Screen	8-2
Basic	1-1
Battery Warning Message	1-10
Before Playing a USB MP3	2-11
Before Thinking There is a Product Defect ...	5-32
Before Thinking the Product Has Malfunctioned	10-4
Before Using the Bluetooth® Handsfree ...	3-2
Before Using UVO eServices	4-2
Bluetooth Audio	2-26
Bluetooth Connection Settings	9-4
Bluetooth Connection	3-4
Bluetooth Connections Settings	2-27
Bluetooth Phone	3-6
Bluetooth® Audio Mode	2-26
Bluetooth	7-7

C

Call History	3-9
Canceling Route	5-26
Caution	2-20
CAUTIONS upon Connecting Bluetooth® Phone	3-3
Changing Map View	5-3
Climate Mode	8-2
Clock Settings	9-8
Component Names and Functions ...	1-5
Connecting Bluetooth Devices	3-4
Contacts	3-10

D

Deleting Bluetooth Devices	3-5
Detour	5-5
Dial	3-7
Direct Tune	2-8
Disconnecting Bluetooth Devices	3-5
Display Route Information	5-26
Display Settings	9-3
Display	5-30

E

Editing Route	5-28
Ending Voice Recognition	6-3
eServices Guide	4-3
Extending the Standby Time	6-4

F

FAQ	10-7
Favorites	3-11
“Find the Nearest <Category>” List	6-15
FM/AM Mode	2-2

G

General	5-30
Guidance	5-31

H

Head Unit	1-5
Head Unit	1-6
Help Screen	6-6
Home Screen	1-11
Home	7-6

I

Index	10-9
Info	7-1
Instructions for Using Voice Recognition	6-7
iPod	2-22

K

Key Product Features	1-4
Keyboard Settings	9-8

M

Map Scale	5-4
Media Commands	6-12
Media Mode	2-10
Menu	5-4
My Music	2-28

N

Navigation	5-1
Navigation Commands	6-9
Navigation Settings	5-30
Navigation Volume	5-5

Nearby POIs	5-6
-------------------	-----

O

On-Screen Touch Controls	1-12
Operating Climate Mode	8-2
Operating Navigation Screen	5-2
Other Commands	
List(CommandsusedinList/Help)	6-14
Other Fratures	8-1

P

Pairing a New Device	3-4
Pandora Radio Mode Screen Controls	7-3
Pandora Radio Mode	7-2
Pandora Radio Mode	7-2
Phone Commands	6-8
Phone Ringtone	9-6
Phone Settings	9-4
Phone Settings	9-4
Phone Status Icons	3-6
Precautions for Safe Driving	3-2
Precautions Required for Successful Voice Recognition	6-2

Product Specification10-2

Q

Quick Guide 7-6

R

Radio Commands6-11

Roadside Assist 4-2

Route Guidance5-24

Route Option 5-4

Route Options5-29

Route Overview5-27

Route Preview5-27

Route Setting5-21

Route5-26

Route5-31

S

Screen Saver Settings..... 9-8

Search5-14

Selecting through Channel/Category List ... 2-8

Setup 9-1

Setup 9-2

SiriusXM™ Data 7-8

SiriusXM™ Fuel Price Information7-10

SiriusXM™ Mode Display Controls ... 2-6

SiriusXM™ Mode Hard Key Controls 2-5

SiriusXM™ Mode 2-5

SiriusXM™ Movie Information7-14

SiriusXM™ Sports Information7-12

SiriusXM™ Stock Information.....7-11

SiriusXM™ Traffic Information..... 7-9

SiriusXM™ Weather Announcement... 7-8

Skipping Prompt Messages 6-5

Sound Settings 9-3

Start Screen..... 6-6

Starting Mode2-10

Starting the System for the First Time ... 1-9

Starting Voice Recognition 6-3

Starting/Ending and Setting Voice

Recognition 6-3

Steering Wheel Remote Controller..... 1-7

Steering Wheel Remote Controller..... 1-8

System Bluetooth Information..... 9-7

System Info 9-9

System Reset 1-9

System Update 9-9

T

Touch Control 7-6

Traffic5-31

Troubleshooting10-5

Turning the System On/Off 1-9

Types of Commands 6-8

U

USB Image2-16

USB Music2-13

Using Bluetooth 3-1

Using the Menu During a Phone Call... 3-8

UVO eServices 4-2

V

Viewing Menu	2-8
Voice Commands	6-8
Voice Guidance Volume On/Off	5-3
Voice Recognition	6-1
Voice Recognition	7-7
Voice Recognition Screen Overview ...	6-6
Voice Recognition Settings	9-7

W

Warnings and Cautions	1-2
What is Bluetooth® Wireless Technology? ...	3-2
What is Voice Recognition?	6-2

Z

Zoom In /Zoom Out.....	5-3
------------------------	-----

Important Safety Information

Before using your AV&Navigation system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the AV&Navigation system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning:

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the AV&Navigation system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation Features

Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.

Distraction Hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services

Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

U.S.FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT INFORMATION TO THE USER

NOTE : This equipment has been tested and founded to comply with the limits for a
Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation.

If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

The users manual or instruction manual for an unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Toute modification non expressément approuvée par la partie responsable de la conformité pourrait annuler l'autorisation accordée à l'utilisateur d'utiliser cet équipement.

 
MEMO

MEMO

MEMO

MEMO

B2END08

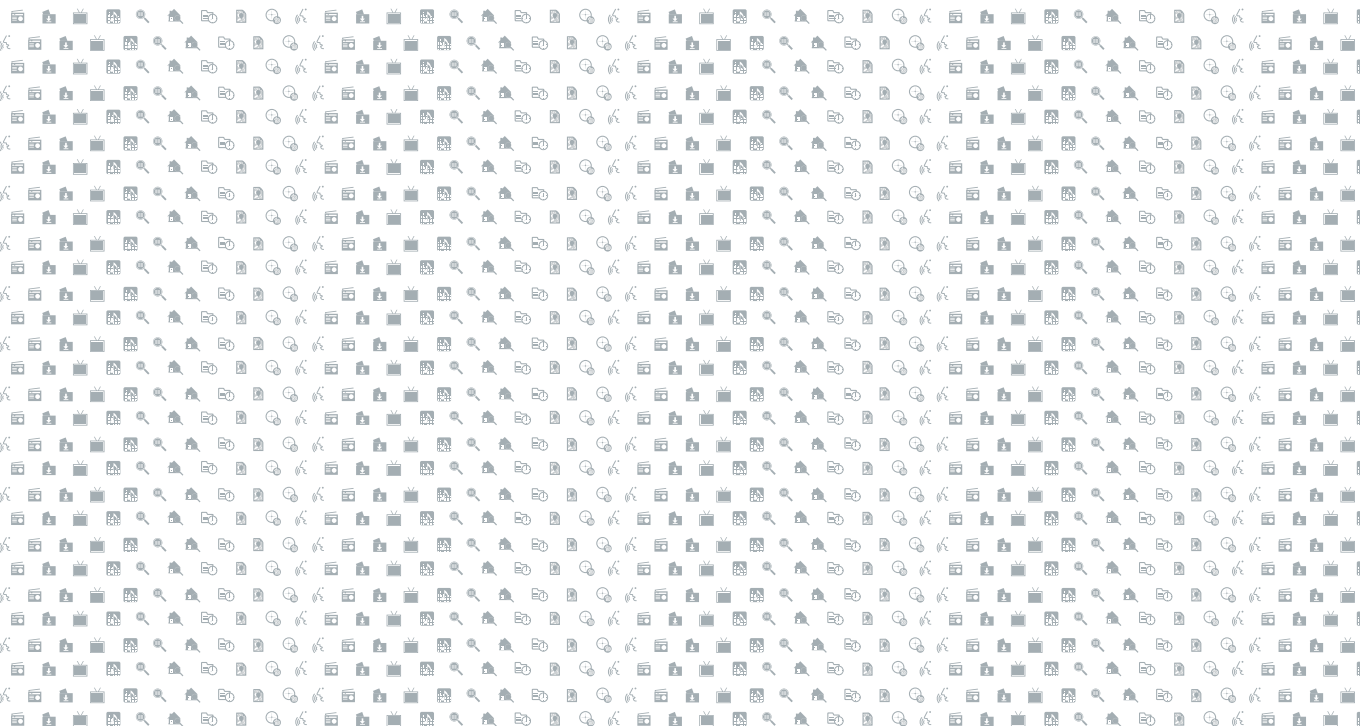

B2MS7-G0001